

ITEM	Part Number	NSN	Description	T.O.Number	A.T.A. Number	Manufacturer	Application / Comments
1	393008-036		Fuel Quantity Indicator		PD2033C	Simmonds	
2	393008-037		Fuel Quantity Indicator		PD2033C	Simmonds	
3	393008-040	6680-01-518-8293	Fuel Quantity Indicator		PD2033C	Simmonds	
4	393008-042		Fuel Quantity Indicator		PD2033C	Simmonds	
5	393008-046		Fuel Quantity Indicator		PD2033C	Simmonds	
6	393008-047	6680-01-247-7708	Fuel Quantity Indicator		PD2033C	Simmonds	
7	393008-056	6680-01-486-0841	Fuel Quantity Indicator		PD2033C	Simmonds	
8	393008-064		Fuel Quantity Indicator		PD2033C	Simmonds	
9	393008-074		Fuel Quantity Indicator		PD2033C	Simmonds	
10	393008-077		Fuel Quantity Indicator		PD2033C	Simmonds	
11	393008-078		Fuel Quantity Indicator		PD2033C	Simmonds	
12	393008-082	6680-01-518-8292	Fuel Quantity Indicator		PD2033C	Simmonds	
13	779-1		Indicator, water gauging		38-14-02	Avtech	
14	112790	6610-00-314-2480	Attitude Indicator, ARU-39/A	5F8-3-33-3		Astronautics	F15A,B,C,D
15	64891-001-1		Position Indicator, Control Surface		27-11-31	Jaeger	
16	64891-002-1		Position Indicator, Control Surface		27-11-31	Jaeger	
17	64891-002-2		Position Indicator, Control Surface		27-11-31	Jaeger	
18	64891-002-3		Position Indicator, Control Surface		27-11-31	Jaeger	
19	64891-002-4		Position Indicator, Control Surface		27-11-31	Jaeger	
20	135070	6610-01-132-1898	Flight Attitude Indicator	5F8-3-46-3		Astronautics	
21	136000-01-01	6610-00-783-5470	Attitude Director Indicator	5F8-3-21-3		Lear Siegler	
22	136000-01-02		Attitude Director Indicator	5F8-3-21-4		Lear Siegler	
23	136000-01-03		Attitude Director Indicator			Lear Siegler	
24	136910-01-01	6610-00-833-3315	Attitude Director Indicator			Lear Siegler	
25	20041-0000-03	6680-01-344-4747	Liquid Quantity Transmitter		79-31-14	Simmonds(BFG)	
26	501-1230-01	6610-01-182-9481	Attitude Indicator	5F8-3-48-3		JET Electronics	
27	394473-101		Variable Capacitor Trimmer Unit		28-41-16	Simmonds	
28	394473-131	5910-01-223-4641					
29	JG3B9	6680-00-526-8284	Fuel Quantity Indicator	5L6-3-17-3		Honeywell	
30	JG3B10	6680-00-526-8285	Fuel Quantity Indicator	5L6-3-17-4		Honeywell	
31	JG3B11	6680-00-526-7716	Fuel Quantity Indicator			Honeywell	
32	JG3B12		Fuel Quantity Indicator			Honeywell	C130A
33	JG4B1		Fuel Quantity Indicator			Honeywell	
34	JG4B9	6680-00-526-8287	Fuel Quantity Indicator			Honeywell	C130A
35	116595-01	6610-00-557-3030	Attitude Indicator	5F8-10-4-23		Lear Seigler	
36	136601-01-03	6610-00-866-3234	Attitude Indicator	5F8-10-4-24		Lear Seigler	
37	118930-02-01	6610-00-965-9840	Attitude Indicator			Lear Seigler	
38	138094-01-01	6610-00-809-0978	Attitude Indicator			Lear Seigler	
39	138094-01-02	6610-00-990-9825	Attitude Indicator			Lear Seigler	
40	41105-C5A-4-B3	6680-00-841-0302	Dual Tachometer Indicator	TM55-6680-234-40		Bendix	
41	41105-C5A-4-E3	6680-00-841-0302					
42	162L2	6685-00-959-5576	Temp. Indicator	5E6-3-34-113		Lewis Engineering	
43	162L3	6685-00-915-9344	Temp. Indicator	5E6-3-34-114		Lewis Engineering	
44	162L3A	6685-00-982-4016	Temp. Indicator			Lewis Engineering	
45	162L4	6685-00-987-9118	Temp. Indicator			Lewis Engineering	
46	162L4B	6685-00-998-8356	Temp. Indicator			Lewis Engineering	
47	162L4C	6685-00-882-1643	Temp. Indicator			Lewis Engineering	
48	212-070-160-1	6620-00-409-8506	Dual Torque Indicator	5E6-11-2-13		Edison	
49	32005-007	6680-00-585-1503	Tachometer Generator		File#3206	A/C Appliances and Equipment	
50	32005-008		Tachometer Generator				
51	32005-023		Tachometer Generator				
52	32005-025		Tachometer Generator				
53	32005-026	6680-00-179-2175	Tachometer Generator				
54	8DJ13ABN	6620-00-254-8985	Electric Tachometer	5E5-3-1-33		General Electric	
55	8DJ13AFN		Electric Tachometer	5E5-3-1-34		General Electric	
56	2CM5ABW	6620-00-526-8138	Electric Tachometer			General Electric	
57	2CM5ACE		Electric Tachometer			General Electric	
58	2CM5ACZ	6620-00-526-8130	Electric Tachometer			General Electric	
59	2CM5ADR	6680-00-487-4289	Electric Tachometer			General Electric	
60	2CM5AEN	6620-00-526-8140	Electric Tachometer			General Electric	
61	2CM5BAL	6620-00-487-4290	Electric Tachometer			General Electric	
62	2CM5BAM	6680-00-923-4081	Electric Tachometer			General Electric	
63	2CM7AAA		Electric Tachometer			General Electric	
64	2CM7AAN	6620-00-348-5002	Electric Tachometer			General Electric	
65	2CM9AAA		Electric Tachometer			General Electric	
66	2CM9AAA6	6680-00-815-1905	Electric Tachometer			General Electric	
67	2CM9AAB	6620-00-526-8136	Electric Tachometer			General Electric	
68	2CM9AAC	6620-00-526-5581	Electric Tachometer			General Electric	
69	2CM9AAC6	6620-00-959-7632	Electric Tachometer			General Electric	
70	2CM9AAF		Electric Tachometer			General Electric	
71	8DJ13AFX		Electric Tachometer			General Electric	
72	8DJ13AKD	6620-00-526-5019	Electric Tachometer			General Electric	T28A
73	8DJ19AAR		Electric Tachometer			General Electric	
74	8DJ19AAS		Electric Tachometer			General Electric	
75	8DJ19AAW		Electric Tachometer			General Electric	
76	8DJ19AAX		Electric Tachometer			General Electric	
77	8DJ19ABE	6620-00-663-7769	Electric Tachometer			General Electric	C49A
78	8DJ19ABF		Electric Tachometer			General Electric	
79	8DJ19ACA	6620-00-663-7773	Electric Tachometer			General Electric	C118A
80	8DJ19ACB	6620-00-526-6640	Electric Tachometer			General Electric	C54D
81	8DJ43AAD		Electric Tachometer			General Electric	
82	8DJ43AAE		Electric Tachometer			General Electric	
83	8DJ43AAH		Electric Tachometer			General Electric	
84	8DJ43AAK1		Electric Tachometer			General Electric	
85	8DJ43AAK3		Electric Tachometer			General Electric	
86	8DJ43AAK5	6620-00-663-7990	Electric Tachometer			General Electric	
87	8DJ43AAM	6620-00-515-4541	Electric Tachometer			General Electric	
88	8DJ43BAD	6620-00-515-4542	Electric Tachometer			General Electric	F100F
89	8DJ43BAE	6620-00-551-3608	Electric Tachometer			General Electric	C123B
90	8DJ43BAH	6620-00-526-6639	Electric Tachometer			General Electric	
91	18-1700	5305-00-018-1700	Pressure Indicator		Dwg.#525-101	Bendix	
92	18-1701	5305-00-018-1700			rev. F		
93	18-1702	5305-00-543-2273					T38A
94	18-2099						
95	T9844140	5945-00-709-6825	Flasher, Nav. Light	8D10-6-11-3			
96	163B2	6685-00-603-3913	Temperature Indicator	05-40BC-502		Lewis Engineering	
97	162B4	6685-00-514-5328					
98	162C20B		Electrical Thermometer			Lewis Engineering	
99	162C21		Electrical Thermometer		31-15	Lewis Engineering	
100	162C22		Electrical Thermometer			Lewis Engineering	
101	162C23		Electrical Thermometer			Lewis Engineering	
102	162C25		Electrical Thermometer			Lewis Engineering	
103	162C27		Electrical Thermometer			Lewis Engineering	
104	162C28		Electrical Thermometer			Lewis Engineering	
105	162BCL10		Electrical Thermometer		31-10	Lewis Engineering	
106	162BCL11		Electrical Thermometer			Lewis Engineering	
107	162BCL12		Electrical Thermometer			Lewis Engineering	
108	162BCL15		Electrical Thermometer			Lewis Engineering	
109	162BCL16		Electrical Thermometer			Lewis Engineering	
110	162BCL17		Electrical Thermometer			Lewis Engineering	
111	162BCL17W		Electrical Thermometer			Lewis Engineering	
112	6300		Dual Autosyn Indicator	5P3-4-14-3		Eclipse-Pioneer	C130E
113	6800			5P3-4-14-4			
114	6801						
115	8AW59FAA1	6625-00-668-7818	Frequency Meter		24-20-5	General Electric	
116	8AW59FAC1	6625-01-121-4891					
117	LG14C20	6620-00-078-4470	Pressure Ratio Transducer	5E12-6-3		Honeywell	

118	LG14C12	6620-00-996-8025		5E12-6-4			C135B; E3A; NKC135A
119	164-1	6680-00-753-8932	Liquid Oxygen Quantity Indicator	15X4-3-1-103		Penn Airborne	
120	9A-225		Liquid Oxygen Quantity Indicator	15X4-3-1-104		Penn Airborne	
121	1160-8	6680-00-952-3943	Liquid Oxygen Quantity Indicator			Penn Airborne	
122	664-1	6680-00-763-1419	Liquid Oxygen Quantity Indicator			Penn Airborne	
123	664-2	6680-00-764-6312	Liquid Oxygen Quantity Indicator			Penn Airborne	
124	664-2HEA	6680-00-937-0430	Liquid Oxygen Quantity Indicator			Penn Airborne	C5A,B
125	9A-1036-2	6680-00-015-0347	Liquid Oxygen Quantity Indicator			Penn Airborne	
126	9A-1040	6680-01-068-4284	Liquid Oxygen Quantity Indicator			Penn Airborne	F15C
127	9A-360	6680-00-900-8356	Liquid Oxygen Quantity Indicator			Penn Airborne	AC130A; C130A,B,E
128	9A-360HEA	6680-00-937-0429	Liquid Oxygen Quantity Indicator			Penn Airborne	AC130A; C130E
129	9A-4HEA	6680-00-849-7865	Liquid Oxygen Quantity Indicator			Penn Airborne	
130	JG132B5		Fuel Quantity Indicator	5L6-3-40-3		Honeywell	
131	JG132B6	6680-00-894-5005		5L6-3-40-4			F44D; RF44C; RF444C
132	JG132B8	6680-00-927-4025					
133	622-0292-003		Horizontal Situation Indicator	5F8-16-7-13		Collins	
134	622-0290-004	6605-01-042-4831					F15B,C,D
135	ID-1805/AJN-18	6605-01-042-4831					
136	JG151A-1	6620-00-628-6905	Pressure Ratio Indicator	5P3-4-50-3		Honeywell	
137	2CM11BAA4		Tachometer Generator	5E5-3-34-3		General Electric	
138	2CM11BAA5	6620-00-785-2251					J0085005H
139	SRDS-15C	6620-00-474-6952	Pressure Ratio Indicator	5P3-4-40-43		US Gauge	
140	JG298B1	6620-00-996-8026	Pressure Ratio Indicator	5E6-4-6-3		Honeywell	WC135B
141	1777213		Gyrosyn Compass Indicator		34-33-X	Honeywell	
142	1777214		Gyrosyn Compass Indicator			Honeywell	
143	1778686		Gyrosyn Compass Indicator			Honeywell	
144	1782755		Gyrosyn Compass Indicator			Honeywell	
145	1782993		Gyrosyn Compass Indicator			Honeywell	
146	1784389		Gyrosyn Compass Indicator			Honeywell	
147	8200000	5930-00-642-9657	Pressure Switch		Dwg.#8200000	Electro National Corp.	
148	SA1-1-70000					Avionix Corp.	
149	JG402A2	6680-00-580-1247	Fuel Quantity Indicator	5L6-3-31-33		Honeywell	
150	JG402A3	6680-00-580-1246	Fuel Quantity Indicator	5L6-3-31-34		Honeywell	
151	JG402A32	6680-00-866-5116	Fuel Quantity Indicator			Honeywell	C130A,B,E,H; DC130E; WC130E
152	JG402A4	6680-00-580-1248	Fuel Quantity Indicator			Honeywell	C130B,E,H; DC130E; WC130B,E
153	JG402A52	6680-00-056-1779	Fuel Quantity Indicator			Honeywell	
154	JG402A53	6680-01-060-5228	Fuel Quantity Indicator			Honeywell	
155	JG402A54	6680-01-058-5859	Fuel Quantity Indicator			Honeywell	
156	JG402A55	6680-01-058-5860	Fuel Quantity Indicator			Honeywell	
157	653894-6BA	6610-00-897-4529	Directional Gyroscopic Indicator	5F8-5-8-3		Sperry	B52D,G,H
158	162L2	6685-00-959-5576	Temperature Indicator	5E6-3-34-113		Lewis Engineering	
159	162L3	6685-00-915-9344	Temperature Indicator	5E6-3-34-114		Lewis Engineering	
160	162L3A	6685-00-982-4016	Temperature Indicator			Lewis Engineering	
161	162L4	6685-00-987-9118	Temperature Indicator			Lewis Engineering	
162	162L4B	6685-00-998-8356	Temperature Indicator			Lewis Engineering	
163	162L4C	6685-00-882-1643	Temperature Indicator			Lewis Engineering	
164	34100-C1D-6-1C1	6620-00-684-1952	Electrical Tachometer Indicator	5E6-2-36-33		Bendix	
165	JG130A68	6680-01-479-7212	Fuel Quantity Indicator		28-1-2	Honeywell	
166	JG131A35	6680-00-561-9413	Fuel Quantity Indicator		28-1-2	Honeywell	
167	JG131A36		Fuel Quantity Indicator		28-1-2	Honeywell	
168	JG131A37		Fuel Quantity Indicator		28-1-2	Honeywell	
169	JG131A38		Fuel Quantity Indicator		28-1-2	Honeywell	
170	JG131A40		Fuel Quantity Indicator		28-1-2	Honeywell	
171	JG131A41		Fuel Quantity Indicator		28-1-2	Honeywell	
172	JG131A42		Fuel Quantity Indicator		28-1-2	Honeywell	
173	JG131A43		Fuel Quantity Indicator		28-1-2	Honeywell	
174	JG131A45		Fuel Quantity Indicator		28-1-2	Honeywell	
175	JG131A51		Fuel Quantity Indicator		28-1-2	Honeywell	
176	JG131A53	6680-01-479-6202	Fuel Quantity Indicator		28-1-2	Honeywell	
177	JG131A54	6680-01-479-6320	Fuel Quantity Indicator		28-1-2	Honeywell	
178	JG131A55		Fuel Quantity Indicator		28-1-2	Honeywell	
179	JG131A56		Fuel Quantity Indicator		28-1-2	Honeywell	
180	JG131A57		Fuel Quantity Indicator		28-1-2	Honeywell	
181	JG131A58		Fuel Quantity Indicator		28-1-2	Honeywell	
182	JG131A59		Fuel Quantity Indicator		28-1-2	Honeywell	
183	JG131A60	6680-01-479-6172	Fuel Quantity Indicator		28-1-2	Honeywell	
184	JG131A61	6680-01-479-6180	Fuel Quantity Indicator		28-1-2	Honeywell	
185	JG131A67		Fuel Quantity Indicator		28-1-2	Honeywell	
186	JG131A68	6680-01-479-6308	Fuel Quantity Indicator		28-1-2	Honeywell	
187	JG131A69	6680-01-479-6181	Fuel Quantity Indicator		28-1-2	Honeywell	
188	JG131A70		Fuel Quantity Indicator		28-1-2	Honeywell	
189	JG131A71		Fuel Quantity Indicator		28-1-2	Honeywell	
190	JG131A73		Fuel Quantity Indicator		28-1-2	Honeywell	
191	JG131A74		Fuel Quantity Indicator		28-1-2	Honeywell	
192	JG131A75		Fuel Quantity Indicator		28-1-2	Honeywell	
193	JG131A76		Fuel Quantity Indicator		28-1-2	Honeywell	
194	JG131A77		Fuel Quantity Indicator		28-1-2	Honeywell	
195	JG131A79		Fuel Quantity Indicator		28-1-2	Honeywell	
196	JG131A80		Fuel Quantity Indicator		28-1-2	Honeywell	
197	JG131A83		Fuel Quantity Indicator		28-1-2	Honeywell	
198	JG603C2		Fuel Quantity Indicator		28-40-10	Honeywell	
199	JG603C3		Fuel Quantity Indicator		28-40-10	Honeywell	
200	JG603C4		Fuel Quantity Indicator		28-40-10	Honeywell	
201	JG603C42		Fuel Quantity Indicator		28-40-10	Honeywell	
202	JG603C43		Fuel Quantity Indicator		28-40-10	Honeywell	
203	JG603C44		Fuel Quantity Indicator		28-40-10	Honeywell	
204	JG603C51		Fuel Quantity Indicator		28-40-10	Honeywell	
205	JG603C52		Fuel Quantity Indicator		28-40-10	Honeywell	
206	JG603C67		Fuel Quantity Indicator		28-40-10	Honeywell	
207	JG603C70		Fuel Quantity Indicator		28-40-10	Honeywell	
208	JG603C73		Fuel Quantity Indicator		28-40-10	Honeywell	
209	JG603C78		Fuel Quantity Indicator		28-40-10	Honeywell	
210	JG603C80		Fuel Quantity Indicator		28-40-10	Honeywell	
211	JG603C81		Fuel Quantity Indicator		28-40-10	Honeywell	
212	45-0148-10		Landing Light, Retractable		33-40-84	Grimes	
213	45-0148-3		Landing Light, Retractable		33-40-84	Grimes	
214	45-0148-4		Landing Light, Retractable		33-40-84	Grimes	
215	45-0148-7		Landing Light, Retractable		33-40-84	Grimes	
216	45-0148-8		Landing Light, Retractable		33-40-84	Grimes	
217	45-0148-9		Landing Light, Retractable		33-40-84	Grimes	
218	610BL24B	6685-01-097-6801	Electrical Resistance Thermometer		31-20-22	Lewis Engineering	
219	610BL29	6685-01-043-7538	Electrical Resistance Thermometer		31-20-22	Lewis Engineering	E3A
220	610BL3		Electrical Resistance Thermometer		31-20-22	Lewis Engineering	
221	610BL3B		Electrical Resistance Thermometer		31-20-22	Lewis Engineering	
222	610BL4		Electrical Resistance Thermometer		31-20-22	Lewis Engineering	
223	610BL4B		Electrical Resistance Thermometer		31-20-22	Lewis Engineering	
224	610BL4D		Electrical Resistance Thermometer		31-20-22	Lewis Engineering	
225	610BL4E		Electrical Resistance Thermometer		31-20-22	Lewis Engineering	
226	610BL4H		Electrical Resistance Thermometer		31-20-22	Lewis Engineering	
227	610BL9		Electrical Resistance Thermometer		31-20-22	Lewis Engineering	E3A
228	36148-1AJ25A1		Radio Magnetic Compass Indicator		34-20-01	Allied Signal	
229	36148-1AJ25A2		Radio Magnetic Compass Indicator		34-20-01	Allied Signal	
230	36154-1AF25A1		Radio Magnetic Compass Indicator		34-20-01	Allied Signal	
231	36154-1AF25B1		Radio Magnetic Compass Indicator		34-20-01	Allied Signal	
232	36154-1AJ25A1		Radio Magnetic Compass Indicator		34-20-01	Allied Signal	
233	36154-1AJ25B1	1680-01-479-6450	Radio Magnetic Compass Indicator		34-20-01	Allied Signal	
234	36154-1AJ33B1		Radio Magnetic Compass Indicator		34-20-01	Allied Signal	
235	36155-1AF25A1		Radio Magnetic Compass Indicator		34-20-01	Allied Signal	

236	36155-1AF25A2		Radio Magnetic Compass Indicator		34-20-01	Allied Signal	
237	36155-1AJ25A1		Radio Magnetic Compass Indicator		34-20-01	Allied Signal	
238	36162-1AJ25A1		Radio Magnetic Compass Indicator		34-20-01	Allied Signal	
239	162BL403C	6685-01-112-9463	Electrical Resistance Thermometer		31-20-28	Lewis Engineering	
240	162CL81		Electrical Resistance Thermometer		31-20-28	Lewis Engineering	
241	162CL81W		Electrical Resistance Thermometer		31-20-28	Lewis Engineering	
242	162CL82W		Electrical Resistance Thermometer		31-20-28	Lewis Engineering	
243	162BL602		Electrical Resistance Thermometer		31-20-19	Lewis Engineering	
244	162BL701	6685-01-095-0270	Electrical Resistance Thermometer		31-20-19	Lewis Engineering	
245	162BL701A		Electrical Resistance Thermometer		31-20-19	Lewis Engineering	
246	162BL702		Electrical Resistance Thermometer		31-20-19	Lewis Engineering	
247	162BL703		Electrical Resistance Thermometer		31-20-19	Lewis Engineering	
248	162BL704	6685-00-958-6404	Electrical Resistance Thermometer		31-20-19	Lewis Engineering	
249	162BL704A		Electrical Resistance Thermometer		31-20-19	Lewis Engineering	
250	162BL704C		Electrical Resistance Thermometer		31-20-19	Lewis Engineering	
251	162BL704D		Electrical Resistance Thermometer		31-20-19	Lewis Engineering	
252	162BL704F	6685-01-014-0578	Electrical Resistance Thermometer		31-20-19	Lewis Engineering	
253	162BL704H		Electrical Resistance Thermometer		31-20-19	Lewis Engineering	
254	162BL704K		Electrical Resistance Thermometer		31-20-19	Lewis Engineering	
255	162BL704L		Electrical Resistance Thermometer		31-20-19	Lewis Engineering	
256	162BL704N		Electrical Resistance Thermometer		31-20-19	Lewis Engineering	
257	162BL801	6685-00-215-0557	Electrical Resistance Thermometer		31-20-19	Lewis Engineering	
258	162BL802		Electrical Resistance Thermometer		31-20-19	Lewis Engineering	
259	162BL802A		Electrical Resistance Thermometer		31-20-19	Lewis Engineering	
260	162BL803		Electrical Resistance Thermometer		31-20-19	Lewis Engineering	
261	162BL803A		Electrical Resistance Thermometer		31-20-19	Lewis Engineering	
262	8DJ81LWN2		Tachometer Indicator		77-10-04	Ametek	
263	8DJ81LXT2		Tachometer Indicator		77-10-04	Ametek	
264	8DJ81AAA1		Tachometer Indicator		77-10-04	Ametek	
265	8DJ81AAB1		Tachometer Indicator		77-10-04	Ametek	
266	8DJ81AAC1	6680-00-891-8301	Tachometer Indicator		77-10-04	Ametek	
267	8DJ81BAA1	6620-00-551-3608	Tachometer Indicator		77-10-04	Ametek	
268	8DJ81CAA1	6620-00-621-0143	Tachometer Indicator		77-10-04	Ametek	F100F
269	8DJ81CAA2	6620-00-969-3972	Tachometer Indicator		77-10-04	Ametek	
270	8DJ81CAB2		Tachometer Indicator		77-10-04	Ametek	
271	8DJ81CAC1		Tachometer Indicator		77-10-04	Ametek	
272	8DJ81CAC2		Tachometer Indicator		77-10-04	Ametek	
273	8DJ81CAE1		Tachometer Indicator		77-10-04	Ametek	
274	8DJ81CAE2	6620-00-973-3685	Tachometer Indicator		77-10-04	Ametek	
275	8DJ81CAF1		Tachometer Indicator		77-10-04	Ametek	
276	8DJ81CAF2		Tachometer Indicator		77-10-04	Ametek	
277	8DJ81CAH1		Tachometer Indicator		77-10-04	Ametek	
278	8DJ81CAH2		Tachometer Indicator		77-10-04	Ametek	
279	8DJ81CAK1	6620-00-857-8263	Tachometer Indicator		77-10-04	Ametek	
280	8DJ81CAK2	6620-00-975-2539	Tachometer Indicator		77-10-04	Ametek	
281	8DJ81CAL1	6620-00-787-7668	Tachometer Indicator		77-10-04	Ametek	
282	8DJ81CAM1		Tachometer Indicator		77-10-04	Ametek	
283	8DJ81CAM2		Tachometer Indicator		77-10-04	Ametek	
284	8DJ81CAN1		Tachometer Indicator		77-10-04	Ametek	
285	8DJ81CAN2	6620-00-543-2534	Tachometer Indicator		77-10-04	Ametek	
286	8DJ81CAS2		Tachometer Indicator		77-10-04	Ametek	
287	8DJ81CAX2		Tachometer Indicator		77-10-04	Ametek	
288	8DJ81CAY2		Tachometer Indicator		77-10-04	Ametek	
289	8DJ81CAZ2	6620-00-738-5594	Tachometer Indicator		77-10-04	Ametek	
290	8DJ81CBA2		Tachometer Indicator		77-10-04	Ametek	
291	8DJ81CBB2		Tachometer Indicator		77-10-04	Ametek	
292	8DJ81CBK2	6620-01-106-3454	Tachometer Indicator		77-10-04	Ametek	
293	8DJ81CBX2	6620-00-851-5381	Tachometer Indicator		77-10-04	Ametek	
294	8DJ81CCK2		Tachometer Indicator		77-10-04	Ametek	
295	8DJ81CCL2		Tachometer Indicator		77-10-04	Ametek	
296	8DJ81CCM2		Tachometer Indicator		77-10-04	Ametek	
297	8DJ81CDC2		Tachometer Indicator		77-10-04	Ametek	
298	8DJ81CDE2	6680-00-533-8600	Tachometer Indicator		77-10-04	Ametek	
299	8DJ81CDH2		Tachometer Indicator		77-10-04	Ametek	
300	8DJ81CDY2	6680-01-418-4890	Tachometer Indicator		77-10-04	Ametek	
301	8DJ81FAA1		Tachometer Indicator		77-10-04	Ametek	
302	8DJ81FAA2		Tachometer Indicator		77-10-04	Ametek	
303	8DJ81LAA1	6620-00-553-8862	Tachometer Indicator		77-10-04	Ametek	F106A
304	8DJ81LAA2	6620-00-987-9242	Tachometer Indicator		77-10-04	Ametek	F105D
305	8DJ81LAB2		Tachometer Indicator		77-10-04	Ametek	
306	8DJ81LAC1		Tachometer Indicator		77-10-04	Ametek	
307	8DJ81LAC2		Tachometer Indicator		77-10-04	Ametek	
308	8DJ81LAD1		Tachometer Indicator		77-10-04	Ametek	
309	8DJ81LAD2		Tachometer Indicator		77-10-04	Ametek	
310	8DJ81LAE1		Tachometer Indicator		77-10-04	Ametek	
311	8DJ81LAE2		Tachometer Indicator		77-10-04	Ametek	
312	8DJ81LAK1		Tachometer Indicator		77-10-04	Ametek	
313	8DJ81LAK2		Tachometer Indicator		77-10-04	Ametek	
314	8DJ81LAN2		Tachometer Indicator		77-10-04	Ametek	
315	8DJ81LAT1		Tachometer Indicator		77-10-04	Ametek	
316	8DJ81LAT2		Tachometer Indicator		77-10-04	Ametek	
317	8DJ81LAV2		Tachometer Indicator		77-10-04	Ametek	
318	8DJ81LAW1		Tachometer Indicator		77-10-04	Ametek	
319	8DJ81LAW2		Tachometer Indicator		77-10-04	Ametek	
320	8DJ81LAX2		Tachometer Indicator		77-10-04	Ametek	
321	8DJ81LAY2		Tachometer Indicator		77-10-04	Ametek	
322	8DJ81LAZ2		Tachometer Indicator		77-10-04	Ametek	
323	8DJ81LBC2		Tachometer Indicator		77-10-04	Ametek	
324	8DJ81LBD2		Tachometer Indicator		77-10-04	Ametek	
325	8DJ81LBE2		Tachometer Indicator		77-10-04	Ametek	
326	8DJ81LBF2		Tachometer Indicator		77-10-04	Ametek	
327	8DJ81LBH2		Tachometer Indicator		77-10-04	Ametek	
328	8DJ81LBK2		Tachometer Indicator		77-10-04	Ametek	
329	8DJ81LBL2		Tachometer Indicator		77-10-04	Ametek	
330	8DJ81LBS2	1680-01-479-7098	Tachometer Indicator		77-10-04	Ametek	
331	8DJ81LBT2		Tachometer Indicator		77-10-04	Ametek	
332	8DJ81LBX2		Tachometer Indicator		77-10-04	Ametek	
333	8DJ81LCB2		Tachometer Indicator		77-10-04	Ametek	
334	8DJ81LCD2		Tachometer Indicator		77-10-04	Ametek	
335	8DJ81LCF2		Tachometer Indicator		77-10-04	Ametek	
336	8DJ81LCK2		Tachometer Indicator		77-10-04	Ametek	
337	8DJ81LWA1	6620-00-684-1952	Tachometer Indicator		77-10-04	Ametek	
338	8DJ81LWA2	6620-00-994-9159	Tachometer Indicator		77-10-04	Ametek	
339	8DJ81LWB2		Tachometer Indicator		77-10-04	Ametek	
340	8DJ81LWC2		Tachometer Indicator		77-10-04	Ametek	
341	8DJ81LWH2		Tachometer Indicator		77-10-04	Ametek	
342	8DJ81LWM2	6620-01-036-2983	Tachometer Indicator		77-10-04	Ametek	
343	8DJ81LWR2	6620-01-114-4059	Tachometer Indicator		77-10-04	Ametek	
344	8DJ81LWS2	6620-01-128-0945	Tachometer Indicator		77-10-04	Ametek	
345	8DJ81LWT2	6620-01-105-3262	Tachometer Indicator		77-10-04	Ametek	
346	8DJ81LWV2		Tachometer Indicator		77-10-04	Ametek	
347	8DJ81LWY2		Tachometer Indicator		77-10-04	Ametek	
348	8DJ81LWZ2		Tachometer Indicator		77-10-04	Ametek	
349	8DJ81LXC2		Tachometer Indicator		77-10-04	Ametek	
350	8DJ81LXD2		Tachometer Indicator		77-10-04	Ametek	
351	8DJ81LXE2		Tachometer Indicator		77-10-04	Ametek	
352	8DJ81LXE2		Tachometer Indicator		77-10-04	Ametek	
353	8DJ81LXG2	6620-01-036-2983	Tachometer Indicator		77-10-04	Ametek	

354	8DJ81LXH2		Tachometer Indicator		77-10-04	Ametek	
355	8DJ81LXK2	6620-01-105-3263	Tachometer Indicator		77-10-04	Ametek	
356	8DJ81LXL2		Tachometer Indicator		77-10-04	Ametek	
357	8DJ81LXM2		Tachometer Indicator		77-10-04	Ametek	
358	8DJ81LXN2		Tachometer Indicator		77-10-04	Ametek	
359	8DJ81LXP2		Tachometer Indicator		77-10-04	Ametek	
360	8DJ81LXV2	6620-00-406-4279	Tachometer Indicator		77-10-04	Ametek	
361	8DJ81LXW2		Tachometer Indicator		77-10-04	Ametek	
362	8DJ81LXY2		Tachometer Indicator		77-10-04	Ametek	
363	8DJ81LXZ2		Tachometer Indicator		77-10-04	Ametek	
364	8DJ81LYA2		Tachometer Indicator		77-10-04	Ametek	
365	8DJ81LYB2		Tachometer Indicator		77-10-04	Ametek	
366	8DJ81LYC2		Tachometer Indicator		77-10-04	Ametek	
367	8DJ81LYP2	6620-01-150-1055	Tachometer Indicator		77-10-04	Ametek	
368	8DJ81LYT2		Tachometer Indicator		77-10-04	Ametek	
369	8DJ81LYV2		Tachometer Indicator		77-10-04	Ametek	
370	8DJ81LYW2		Tachometer Indicator		77-10-04	Ametek	
371	8DJ81LYX2		Tachometer Indicator		77-10-04	Ametek	
372	8DJ81LYZ2		Tachometer Indicator		77-10-04	Ametek	
373	8DJ81LZB2		Tachometer Indicator		77-10-04	Ametek	
374	8DJ81LZC2		Tachometer Indicator		77-10-04	Ametek	
375	8DJ81LZE2		Tachometer Indicator		77-10-04	Ametek	
376	8DJ81LZF2		Tachometer Indicator		77-10-04	Ametek	
377	8DJ81WAG2		Tachometer Indicator		77-10-04	Ametek	
378			Tachometer Indicator		77-10-04	Ametek	
379	40-0135-10		Wing Position Light		33-40-20	Grimes	
380	40-0135-3		Wing Position Light		33-40-20	Grimes	
381	40-0135-4		Wing Position Light		33-40-20	Grimes	
382	40-0135-7		Wing Position Light		33-40-20	Grimes	
383	40-0135-8		Wing Position Light		33-40-20	Grimes	
384	40-0135-9		Wing Position Light		33-40-20	Grimes	
385	162BL501	6685-01-105-9582	Electrical Resistance Thermometer		31-20-20	Lewis Engineering	
386	162BL502		Electrical Resistance Thermometer		31-20-20	Lewis Engineering	
387	162BL503	6685-00-923-6383	Electrical Resistance Thermometer		31-20-20	Lewis Engineering	
388	162BL504	6685-01-064-3220	Electrical Resistance Thermometer		31-20-20	Lewis Engineering	
389	162BL505	6685-01-099-9286	Electrical Resistance Thermometer		31-20-20	Lewis Engineering	
390	162BL804A		Electrical Resistance Thermometer		31-20-20	Lewis Engineering	
391	162BL901		Electrical Resistance Thermometer		31-20-20	Lewis Engineering	
392	162BL902		Electrical Resistance Thermometer		31-20-20	Lewis Engineering	
393	162BL903		Electrical Resistance Thermometer		31-20-20	Lewis Engineering	
394	162BL906	6685-01-013-8572	Electrical Resistance Thermometer		31-20-20	Lewis Engineering	
395	162BL907		Electrical Resistance Thermometer		31-20-20	Lewis Engineering	
396	391097-16001		Liquid Quantity Transmitter		28-41-02	Simmonds	
397	391097-16002		Liquid Quantity Transmitter		28-41-02	Simmonds	
398	391097-16003		Liquid Quantity Transmitter		28-41-02	Simmonds	
399	391097-16004		Liquid Quantity Transmitter		28-41-02	Simmonds	
400	391097-16005		Liquid Quantity Transmitter		28-41-02	Simmonds	
401	391097-16006		Liquid Quantity Transmitter		28-41-02	Simmonds	
402	391097-16007		Liquid Quantity Transmitter		28-41-02	Simmonds	
403	391097-16008		Liquid Quantity Transmitter		28-41-02	Simmonds	
404	391097-16009		Liquid Quantity Transmitter		28-41-02	Simmonds	
405	391097-16010		Liquid Quantity Transmitter		28-41-02	Simmonds	
406	391097-16011		Liquid Quantity Transmitter		28-41-02	Simmonds	
407	391097-16012		Liquid Quantity Transmitter		28-41-02	Simmonds	
408	391097-16013		Liquid Quantity Transmitter		28-41-02	Simmonds	
409	391097-16014		Liquid Quantity Transmitter		28-41-02	Simmonds	
410	391097-16015		Liquid Quantity Transmitter		28-41-02	Simmonds	
411	391097-16016		Liquid Quantity Transmitter		28-41-02	Simmonds	
412	391097-16017		Liquid Quantity Transmitter		28-41-02	Simmonds	
413	393080-117		Dual Total Fuel Indicator		31-00-09	Simmonds/BF Goodrich	
414	393080-118		Dual Total Fuel Indicator		31-00-09	Simmonds/BF Goodrich	
415	393080-121		Dual Total Fuel Indicator		31-00-09	Simmonds/BF Goodrich	
416	JG403A30		Fuel Quantity Indicator		28-40-6	Honeywell	
417	JG403B1	6680-01-010-1980	Fuel Quantity Indicator		28-40-6	Honeywell	
418	JG403B10	6680-01-237-0713	Fuel Quantity Indicator		28-40-6	Honeywell	
419	JG403B11	6680-01-010-1980	Fuel Quantity Indicator		28-40-6	Honeywell	E3A
420	JG403B12	6680-01-016-5672	Fuel Quantity Indicator		28-40-6	Honeywell	E3A
421	JG403B13	6680-01-010-1981	Fuel Quantity Indicator		28-40-6	Honeywell	E3A
422	JG403B14	6680-01-010-1982	Fuel Quantity Indicator		28-40-6	Honeywell	E3A
423	JG403B15	6680-01-237-0713	Fuel Quantity Indicator		28-40-6	Honeywell	
424	JG403B2	6680-01-016-5672	Fuel Quantity Indicator		28-40-6	Honeywell	
425	JG403B3	6680-01-010-1981	Fuel Quantity Indicator		28-40-6	Honeywell	
426	JG403B4	6680-01-010-1982	Fuel Quantity Indicator		28-40-6	Honeywell	
427	JG403B5		Fuel Quantity Indicator		28-40-6	Honeywell	
428	JG403B6		Fuel Quantity Indicator		28-40-6	Honeywell	
429	JG403B7		Fuel Quantity Indicator		28-40-6	Honeywell	
430	JG403B9		Fuel Quantity Indicator		28-40-6	Honeywell	
431	391046-166		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
432	391046-167		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
433	391046-168		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
434	391046-169		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
435	391046-170		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
436	391046-171		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
437	391046-172		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
438	391046-173		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
439	391046-174		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
440	391046-175		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
441	391046-176		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
442	391046-177		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
443	391046-178		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
444	391046-179		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
445	391046-180		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
446	391046-181		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
447	391046-182		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
448	391046-250		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
449	391046-251		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
450	391046-252		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
451	391046-253		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
452	391046-254		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
453	391046-282		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
454	391046-283		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
455	391046-284		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
456	391046-285		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
457	391046-286		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
458	391046-287		Liquid Quantity Transmitter		28-41-06	Simmonds/BF Goodrich	
459	30-0909-1		Tail Position Light		33-40-38	Grimes	
460	30-0909-101		Tail Position Light		33-40-38	Grimes	
461	30-0909-103		Tail Position Light		33-40-38	Grimes	
462	30-0909-107		Tail Position Light		33-40-38	Grimes	
463	30-0909-201		Tail Position Light		33-40-38	Grimes	
464	30-0909-203		Tail Position Light		33-40-38	Grimes	
465	30-0909-207		Tail Position Light		33-40-38	Grimes	
466	391046-01433		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
467	391046-04128		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
468	391046-04129		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
469	391046-04130		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
470	391046-04131		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
471	391046-04132		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	

472	391046-04134		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
473	391046-04135		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
474	391046-04136		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
475	391046-04137		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
476	391046-04138		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
477	391046-04159		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
478	391046-04160		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
479	391046-04161		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
480	391046-04162		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
481	391046-04165		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
482	391046-05128		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
483	391046-05129		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
484	391046-05130		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
485	391046-05131		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
486	391046-05132		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
487	391046-05133		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
488	391046-05134		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
489	391046-05135		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
490	391046-05136		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
491	391046-05137		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
492	391046-05138		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
493	391046-085		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
494	391046-183		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
495	391046-184		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
496	391046-299		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
497	391046-300		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
498	391046-477		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
499	391046-478		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
500	391046-479		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
501	391046-480		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
502	391046-481		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
503	391046-482		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
504	391046-483		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
505	391046-484		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
506	391046-485		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
507	391046-486		Liquid Quantity Transmitter		28-41-05	Simmonds/BF Goodrich	
508	30-1033 -1	6620-01-382-7756	Anti-collision Light, Flashtube		33-40-59	Grimes	
509	30-1033 -11	5310-01-510-5637	Anti-collision Light, Flashtube		33-40-59	Grimes	
510	30-1033 -13		Anti-collision Light, Flashtube		33-40-59	Grimes	
511	30-1033 -17		Anti-collision Light, Flashtube		33-40-59	Grimes	
512	30-1033 -19	6220-01-418-6954	Anti-collision Light, Flashtube		33-40-59	Grimes	
513	30-1033 -21		Anti-collision Light, Flashtube		33-40-59	Grimes	
514	30-1033 -23	6220-01-056-2042	Anti-collision Light, Flashtube		33-40-59	Grimes	
515	30-1033 -25		Anti-collision Light, Flashtube		33-40-59	Grimes	
516	30-1033 -27		Anti-collision Light, Flashtube		33-40-59	Grimes	
517	30-1033 -29		Anti-collision Light, Flashtube		33-40-59	Grimes	
518	30-1033 -3		Anti-collision Light, Flashtube		33-40-59	Grimes	
519	30-1033 -31	6620-01-194-9323	Anti-collision Light, Flashtube		33-40-59	Grimes	
520	30-1033 -33		Anti-collision Light, Flashtube		33-40-59	Grimes	
521	30-1033 -35		Anti-collision Light, Flashtube		33-40-59	Grimes	
522	30-1033 -37		Anti-collision Light, Flashtube		33-40-59	Grimes	
523	30-1033 -39		Anti-collision Light, Flashtube		33-40-59	Grimes	
524	30-1033 -41		Anti-collision Light, Flashtube		33-40-59	Grimes	
525	30-1033 -43		Anti-collision Light, Flashtube		33-40-59	Grimes	
526	30-1033 -45		Anti-collision Light, Flashtube		33-40-59	Grimes	
527	30-1033 -49	6620-01-305-9703	Anti-collision Light, Flashtube		33-40-59	Grimes	
528	30-1033 -5	6620-01-015-5850	Anti-collision Light, Flashtube		33-40-59	Grimes	
529	30-1033 -51		Anti-collision Light, Flashtube		33-40-59	Grimes	
530	30-1033 -53		Anti-collision Light, Flashtube		33-40-59	Grimes	
531	30-1033 -55		Anti-collision Light, Flashtube		33-40-59	Grimes	
532	30-1033 -57	6620-01-483-2775	Anti-collision Light, Flashtube		33-40-59	Grimes	
533	30-1033 -59		Anti-collision Light, Flashtube		33-40-59	Grimes	
534	30-1033 -61		Anti-collision Light, Flashtube		33-40-59	Grimes	
535	30-1033 -63		Anti-collision Light, Flashtube		33-40-59	Grimes	
536	30-1033 -65		Anti-collision Light, Flashtube		33-40-59	Grimes	
537	30-1033 -67		Anti-collision Light, Flashtube		33-40-59	Grimes	
538	30-1033 -7		Anti-collision Light, Flashtube		33-40-59	Grimes	
539	30-1033-15		Anti-collision Light, Flashtube		33-40-59	Grimes	
540	391041-009		Liquid Quantity Compensator		28-40-25	Simmonds/BF Goodrich	
541	391041-020		Liquid Quantity Compensator		28-40-25	Simmonds/BF Goodrich	
542	391041-021		Liquid Quantity Compensator		28-40-25	Simmonds/BF Goodrich	
543	391041-022		Liquid Quantity Compensator		28-40-25	Simmonds/BF Goodrich	
544	391041-024		Liquid Quantity Compensator		28-40-25	Simmonds/BF Goodrich	
545	391041-025		Liquid Quantity Compensator		28-40-25	Simmonds/BF Goodrich	
546	391041-05007		Liquid Quantity Compensator		28-40-25	Simmonds/BF Goodrich	
547	391041-06008		Liquid Quantity Compensator		28-40-25	Simmonds/BF Goodrich	
548	30-0837 -1		Anti-collision Light, Strobe		33-40-39	Grimes	
549	30-0837 -13	6620-01-388-9697	Anti-collision Light, Strobe		33-40-39	Grimes	
550	30-0837 -15	6620-01-387-0906	Anti-collision Light, Strobe		33-40-39	Grimes	
551	30-0837 -17		Anti-collision Light, Strobe		33-40-39	Grimes	
552	30-0837 -19		Anti-collision Light, Strobe		33-40-39	Grimes	
553	30-0837 -21		Anti-collision Light, Strobe		33-40-39	Grimes	
554	30-0837 -23		Anti-collision Light, Strobe		33-40-39	Grimes	
555	30-0837 -25		Anti-collision Light, Strobe		33-40-39	Grimes	
556	30-0837 -27		Anti-collision Light, Strobe		33-40-39	Grimes	
557	30-0837 -29		Anti-collision Light, Strobe		33-40-39	Grimes	
558	30-0837 -3		Anti-collision Light, Strobe		33-40-39	Grimes	
559	30-0837 -31		Anti-collision Light, Strobe		33-40-39	Grimes	
560	30-0837 -33		Anti-collision Light, Strobe		33-40-39	Grimes	
561	30-0837 -35		Anti-collision Light, Strobe		33-40-39	Grimes	
562	30-0837 -37		Anti-collision Light, Strobe		33-40-39	Grimes	
563	30-0837 -39		Anti-collision Light, Strobe		33-40-39	Grimes	
564	30-0837 -41		Anti-collision Light, Strobe		33-40-39	Grimes	
565	30-0837 -43	6620-01-337-9460	Anti-collision Light, Strobe		33-40-39	Grimes	
566	30-0837 -45		Anti-collision Light, Strobe		33-40-39	Grimes	
567	30-0837 -47		Anti-collision Light, Strobe		33-40-39	Grimes	
568	30-0837 -5		Anti-collision Light, Strobe		33-40-39	Grimes	
569	30-0837 -7		Anti-collision Light, Strobe		33-40-39	Grimes	
570	30-0837 -9		Anti-collision Light, Strobe		33-40-39	Grimes	
571	30-0837-11		Anti-collision Light, Strobe		33-40-39	Grimes	
572	4006454		Liquid Quantity Transmitter		29-30-01	Simmonds/BF Goodrich	737
573	4006534		Liquid Quantity Transmitter		29-30-01	Simmonds/BF Goodrich	737
574	20043-0000-01		Liquid Quantity Transmitter		29-30-01	Simmonds/BF Goodrich	
575	20044-0000-01		Liquid Quantity Transmitter		29-30-01	Simmonds/BF Goodrich	
576	20138-1000-0101		Liquid Quantity Transmitter		29-30-01	Simmonds/BF Goodrich	
577	20138-1000-0201		Liquid Quantity Transmitter		29-30-01	Simmonds/BF Goodrich	
578	20139-1000-0101		Liquid Quantity Transmitter		29-30-01	Simmonds/BF Goodrich	
579	20139-1000-0201		Liquid Quantity Transmitter		29-30-01	Simmonds/BF Goodrich	
580	20140-1000-0101		Liquid Quantity Transmitter		29-30-01	Simmonds/BF Goodrich	
581	20140-1000-0201		Liquid Quantity Transmitter		29-30-01	Simmonds/BF Goodrich	
582	EA1093A-3544		Liquid Quantity Transmitter		29-30-01	Simmonds/BF Goodrich	
583	EA1093A-3679		Liquid Quantity Transmitter		29-30-01	Simmonds/BF Goodrich	
584	EA1093AW3679		Liquid Quantity Transmitter		29-30-01	Simmonds/BF Goodrich	
585	161B101	1680-01-479-6288	Electrical Resistance Thermometer		31-20-18	Lewis Engineering	
586	161BL302		Electrical Resistance Thermometer		31-20-18	Lewis Engineering	
587	161BL501	6685-00-923-6384	Electrical Resistance Thermometer		31-20-18	Lewis Engineering	
588	162B101		Electrical Resistance Thermometer		31-20-18	Lewis Engineering	
589	015-001-003	5895-00-952-3032	Hydraulic Reservoir Transmitter		29-31-12	Gull/Parker-Hannifin	747

708	152BL706	6685-00-923-6385	Thermocouple Temp. Indicator		77-20-21	Horizon Aerospace	
709	152BL708	1680-01-479-6282	Thermocouple Temp. Indicator		77-20-21	Horizon Aerospace	
710	152BL708A	1680-01-479-6282	Thermocouple Temp. Indicator		77-20-21	Horizon Aerospace	
711	152BL708B	6930-01-027-2161	Thermocouple Temp. Indicator		77-20-21	Horizon Aerospace	
712	152BL708H	1680-01-479-6282	Thermocouple Temp. Indicator		77-20-21	Horizon Aerospace	
713	152BL709	6685-01-479-7349	Thermocouple Temp. Indicator		77-20-21	Horizon Aerospace	
714	152BL709A		Thermocouple Temp. Indicator		77-20-21	Horizon Aerospace	
715	152BL722	6685-01-038-3407	Thermocouple Temp. Indicator		77-20-21	Horizon Aerospace	
716	152BL801		Thermocouple Temp. Indicator		77-20-21	Horizon Aerospace	
717	152BL801A	6685-01-099-6259	Thermocouple Temp. Indicator		77-20-21	Horizon Aerospace	
718	152BL801B		Thermocouple Temp. Indicator		77-20-21	Horizon Aerospace	
719	152BL801C		Thermocouple Temp. Indicator		77-20-21	Horizon Aerospace	
720	152BL801D		Thermocouple Temp. Indicator		77-20-21	Horizon Aerospace	
721	152BL801E		Thermocouple Temp. Indicator		77-20-21	Horizon Aerospace	
722	152BL802A		Thermocouple Temp. Indicator		77-20-21	Horizon Aerospace	
723	152BL802B	6685-01-222-9299	Thermocouple Temp. Indicator		77-20-21	Horizon Aerospace	
724	152BL802C		Thermocouple Temp. Indicator		77-20-21	Horizon Aerospace	
725	152BL802D		Thermocouple Temp. Indicator		77-20-21	Horizon Aerospace	
726	152BL803		Thermocouple Temp. Indicator		77-20-21	Horizon Aerospace	
727	152BL803A		Thermocouple Temp. Indicator		77-20-21	Horizon Aerospace	
728	152BL803B		Thermocouple Temp. Indicator		77-20-21	Horizon Aerospace	
729	152BL803C		Thermocouple Temp. Indicator		77-20-21	Horizon Aerospace	
730	152BCL4		Thermocouple Thermometer		77-20-8	Lewis Engineering	
731	152BCL4A		Thermocouple Thermometer		77-20-8	Lewis Engineering	
732	152BCL4B		Thermocouple Thermometer		77-20-8	Lewis Engineering	
733	152BCL4C		Thermocouple Thermometer		77-20-8	Lewis Engineering	
734	152BCL4D		Thermocouple Thermometer		77-20-8	Lewis Engineering	
735	152BCL4F		Thermocouple Thermometer		77-20-8	Lewis Engineering	
736	152BCL4G		Thermocouple Thermometer		77-20-8	Lewis Engineering	
737	152BCL4G2		Thermocouple Thermometer		77-20-8	Lewis Engineering	
738	152BCL4H		Thermocouple Thermometer		77-20-8	Lewis Engineering	
739	152BCL4J		Thermocouple Thermometer		77-20-8	Lewis Engineering	
740	152BCL4J2		Thermocouple Thermometer		77-20-8	Lewis Engineering	
741	152BCL4J3		Thermocouple Thermometer		77-20-8	Lewis Engineering	
742	152BCL4P	6685-01-015-6484	Thermocouple Thermometer		77-20-8	Lewis Engineering	
743	152BCL4R		Thermocouple Thermometer		77-20-8	Lewis Engineering	
744	152BCL4S		Thermocouple Thermometer		77-20-8	Lewis Engineering	
745	152BCL4W		Thermocouple Thermometer		77-20-8	Lewis Engineering	
746	152BCL4W2		Thermocouple Thermometer		77-20-8	Lewis Engineering	
747	DSF929	6680-00-496-0574	Fuel Quantity Indicator	5L17-11-3		Consolidated Airborne	
748	TG255-001		Tachometer Generator		File #3208	Advance Power Inc.	
749	TG255-002	6680-00-445-1246	Tachometer Generator		File #3208	Advance Power Inc.	
750	TG255-003	6680-00-920-9213	Tachometer Generator		File #3208	Advance Power Inc.	
751	TG255-004		Tachometer Generator		File #3208	Advance Power Inc.	
752	TG255-005		Tachometer Generator		File #3208	Advance Power Inc.	
753	TG255-006		Tachometer Generator		File #3208	Advance Power Inc.	
754	TG255-007	6680-00-923-8466	Tachometer Generator		File #3208	Advance Power Inc.	
755	TG255-008		Tachometer Generator		File #3208	Advance Power Inc.	
756	MS28054-2	6620-00-551-3825	Tachometer Generator	5E5-3-17-3		Jack and Heinz	F105D; HH43B
757	418-00041	6620-00-067-4946	Oil Pressure Transmitter		79-31-33	Armtec	EF111A; F111A,D,E,F; FB111A
758	418-00044	6620-00-067-4946					
759	418-00141						
760	393004-060	6680-01-360-3569	Fuel Quantity Indicator		PD1208-3	Simmonds	
761	393004-061	6680-01-360-3570					
762	418-01064	6620-01-359-3920	Torque Pressure Transmitter		77-10-42	Edison	
763	391001-153		Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
764	391001-155	6680-01-240-7864	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
765	391001-159	6680-01-240-7860	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
766	391001-161	6680-01-240-7861	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
767	391001-163	6680-01-240-7862	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
768	391001-167	6680-01-223-7887	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
769	391001-169	6680-01-330-1275	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
770	391001-171	6680-01-218-4831	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
771	391001-173		Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
772	391001-177	6680-01-330-1276	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
773	391001-179	6680-01-240-7857	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
774	391001-181		Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
775	391001-183		Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
776	391001-185		Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
777	391001-187	6680-01-223-7885	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
778	391001-189	6680-01-223-7886	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
779	391001-191	6680-01-240-7859	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
780	391001-193	6680-01-240-7863	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
781	391001-343	6680-01-223-7886	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
782	391001-344	6680-01-240-7858	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
783	391001-345	6680-01-240-7864	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
784	391001-346	6680-01-240-7859	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
785	391001-347	6680-01-240-7860	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
786	391001-348	6680-01-240-7861	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
787	391001-349	6680-01-240-7862	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
788	391001-350	6680-01-240-7863	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
789	391001-351	6680-01-223-7887	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
790	391001-352	6680-01-330-1275	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
791	391001-353	6680-01-218-4831	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
792	391001-354	6680-01-223-7884	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
793	391001-355	6680-01-223-7885	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
794	391001-356	6680-01-223-7885	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
795	391001-357	6680-01-240-7857	Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
796	391001-358		Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
797	391001-359		Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
798	391001-360		Liquid Quantity Transmitter		28-41-15	Simmonds/BF Goodrich	
799	EA307AN-1		Position Indicator	5P3-3-6-13		Liquidometer	
800	EA308-1	6610-00-242-0609	Position Indicator	5P3-3-6-14		Liquidometer	
801	EA308-10	6610-00-531-2759	Position Indicator			Liquidometer	
802	EA308-11	6610-00-530-3065	Position Indicator			Liquidometer	
803	EA308-2		Position Indicator			Liquidometer	
804	EA308-3		Position Indicator			Liquidometer	
805	144700-01-01	6610-00-167-9699	Attitude Indicator	5F8-3-27-23		Lear Siegler	F100C,D,F
806	156578-01-01	6610-00-148-7180		5F8-3-27-24			F5F
807	9A400		Temperature Indicator	5E6-3-72-43		Penn Airborne	
808	9A375			NAVAIR 05-40BH-8			
809	9A550						
810	131080-01	6610-00-618-0772	Remote Attitude Indicator	5F8-3-9-3		Lear Siegler	
811	124215-01	6610-00-557-5678		5F8-3-9-4			
812	EA1015A-1957	6680-00-726-9826	Tank Unit, Fuel Quantity	5L6-3-18-3		Liquidometer	
813	EA1065AW-1827		Oil Quantity Tank Unit	5L14-3-8-323		Liquidometer	
814	EA1065AW-2315	6680-00-740-1995					
815	7609-37-B5-2	6685-00-526-7864	Autosyn Gage Pressure Transmitter	5P5-3-24-3		Bendix	
816	7609-37-D5-2	6685-00-526-7864					
817	7609-37-M5-2	6685-00-526-7864					CI30A,B,E; B52H
818	18-1105	6685-00-557-0215	Hydraulic Pressure Indicator	5P3-4-12-63		Courter	F100D; F102A; TF102A
819	656519	6615-00-663-8693	Directional Gyro Control	5N6-2-2-3		Sperry	
820	669339	6615-00-663-8698	Directional Gyro Control	5N6-2-2-4		Sperry	
821	617908	6615-00-531-2501	Directional Gyro Control			Sperry	NT33A
822	673447	6615-00-663-8696	Directional Gyro Control			Sperry	
823	34101-C1E-7-1C1	6620-00-553-8862	Electrical Tachometer Indicator	5E6-2-33-13		Bendix	F105F; F444E
824	020-001-002	6680-00-869-9811	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
825	020-001-003	6680-00-869-9812	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	

826	020-001-004	6680-00-869-9813	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
827	020-001-005	6680-00-869-9814	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
828	020-061-001	6680-00-968-3227	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
829	020-061-002	6680-00-968-3226	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
830	020-061-003	6680-00-968-3225	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
831	020-061-004	6680-00-968-3260	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
832	020-061-005	6680-00-968-3261	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
833	020-061-006	6680-00-968-3263	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
834	020-061-007	6680-00-968-3266	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
835	020-061-008	6680-00-968-3269	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
836	020-061-009	6680-00-968-3271	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
837	020-061-010	6680-00-968-3270	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
838	020-061-011	6680-00-968-3273	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
839	020-061-012	6680-00-968-3228	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
840	020-061-013		Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
841	020-061-014	6680-00-968-3230	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
842	020-061-015	6680-00-968-3242	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
843	020-061-016	6680-00-968-3243	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
844	020-061-017	6680-00-968-3247	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
845	020-061-018	6680-00-968-3251	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
846	020-061-019	6680-00-968-3252	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
847	020-061-020	6680-00-968-3255	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
848	020-061-021	6680-00-968-3258	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
849	020-061-022	6680-00-968-3197	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
850	020-061-023	6680-00-968-3213	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
851	020-061-024	6680-00-968-3223	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
852	020-061-025	6680-00-968-3212	Fuel Quantity Tank Unit	5L14-3-21-13		Gull	
853	EA7722856	6680-00-869-9811	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
854	EA7722857	6680-00-869-9812	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
855	EA7722858	6680-00-869-9813	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
856	EA7722859	6680-00-869-9814	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
857	FG220A100		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130B,E
858	FG220A101	6680-00-585-1038	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
859	FG220A102		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
860	FG220A103		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
861	FG220A104	6680-00-585-0815	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130B,E
862	FG220A105	6680-00-585-0814	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
863	FG220A106	6680-00-585-0813	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130B,E
864	FG220A107	6680-00-585-0812	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
865	FG220A108		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
866	FG220A109		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130B,E
867	FG220A110		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
868	FG220A111	6680-00-585-0821	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130E,H; DC130E; WC130E
869	FG220A112		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
870	FG220A113		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130B,E
871	FG220A114		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130B,E
872	FG220A115		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
873	FG220A155	6680-00-727-2156	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
874	FG220A156	6680-00-727-2157	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
875	FG220A175	6680-00-027-8459	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
876	FG220A176		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
877	FG220A177		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
878	FG220A178		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
879	FG220A179		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
880	FG220A192	6680-00-051-6691	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
881	FG220A193		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
882	FG220A194	6680-00-051-6693	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
883	FG220A195		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
884	FG220A196		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
885	FG220A197	6680-00-051-6688	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
886	FG220A198		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
887	FG220A199	6680-00-051-6698	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
888	FG220A200	6680-00-051-6697	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
889	FG220A201	6680-00-051-6696	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
890	FG220A202		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
891	FG220A203	6680-00-051-6695	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
892	FG220A204	6680-00-051-6701	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
893	FG220A205	6680-00-051-6702	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
894	FG220A206		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130A
895	FG220A207	6680-00-051-6700	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130A
896	FG220A208		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
897	FG220A209		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
898	FG220A210		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
899	FG220A211		Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130B,E
900	FG220A212	6680-00-051-6699	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130E
901	FG220A213	6680-00-056-9540	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
902	FG220A214	6680-00-056-9541	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130E,H
903	FG220A215	6680-00-056-9542	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
904	FG220A216	6680-00-056-9543	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
905	FG220A237	6680-00-968-3225	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130B,E
906	FG220A238	6680-00-968-3226	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130B,E
907	FG220A239	6680-00-968-3227	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130B,E
908	FG220A240	6680-00-968-3228	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130B,E
909	FG220A241	6680-00-585-0826	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130E
910	FG220A242	6680-00-968-3230	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130B,E
911	FG220A243	6680-00-968-3242	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
912	FG220A244	6680-00-968-3243	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130A,B,E,D,H
913	FG220A245	6680-00-968-3247	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130B,E
914	FG220A246	6680-00-968-3251	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130B,E
915	FG220A247	6680-00-968-3252	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130B,E
916	FG220A248	6680-00-968-3255	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130B,E
917	FG220A249	6680-00-968-3258	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130B,E
918	FG220A250	6680-00-968-3260	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130B,E
919	FG220A251	6680-00-968-3261	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130B,E
920	FG220A252	6680-00-968-3263	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130E
921	FG220A253	6680-00-968-3266	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130B,E
922	FG220A254	6680-00-968-3269	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130E
923	FG220A255	6680-00-968-3270	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130A,B,E
924	FG220A256	6680-00-968-3271	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130A,B,E,D,H
925	FG220A257	6680-00-968-3273	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130A,B,E,H
926	FG220A258	6680-00-968-3197	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
927	FG220A259	6680-00-968-3212	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
928	FG220A260	6680-00-968-3213	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130B
929	FG220A261	6680-00-968-3223	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130B,E
930	FG220A60	6680-00-580-1054	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	F106A,B
931	FG220A61	6680-00-580-1055	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	F106A,B
932	FG220A62	6680-00-580-1056	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
933	FG220A63	6680-00-580-1057	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	F106A,B
934	FG220A64	6680-00-580-1058	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	F106A,B
935	FG220A65	6680-00-580-1059	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	F106A,B
936	FG220A66	6680-00-580-1062	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
937	FG220A67	6680-00-580-1060	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
938	FG220A68	6680-00-580-1061	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
939	FG220A75	6680-00-585-3083	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	F106A,B
940	FG220A76	6680-00-585-3081	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	F106A,B
941	FG220A83	6680-00-585-3082	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
942	FG220A95	6680-00-585-9352	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	C130E
943	FG220A96	6680-00-585-9353	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	

944	FG220A97	6680-00-585-9354	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
945	FG220A98	6680-00-585-0825	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
946	FG220A99	6680-00-585-0826	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
947	FG430A237	6680-01-060-5231	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
948	FG430A238	6680-01-058-5867	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
949	FG430A239	6680-01-058-5866	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
950	FG430A240	6680-01-058-5876	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
951	FG430A241	6680-01-058-5877	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
952	FG430A242	6680-01-058-5878	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
953	FG430A243	6680-01-058-5879	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
954	FG430A244	6680-01-058-5880	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
955	FG430A245	6680-01-058-5881	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
956	FG430A246	6680-01-058-5882	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
957	FG430A247	6680-01-058-5883	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
958	FG430A248	6680-01-058-5884	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
959	FG430A249	6680-01-058-5885	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
960	FG430A250	6680-01-058-5868	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
961	FG430A251	6680-01-058-5869	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
962	FG430A252	6680-01-058-5870	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
963	FG430A253	6680-01-058-5871	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
964	FG430A254	6680-01-058-5872	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
965	FG430A255	6680-01-058-5873	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
966	FG430A256	6680-01-058-5874	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
967	FG430A257	6680-01-058-5875	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
968	FG430A258	6680-01-067-4547	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
969	FG430A259	6680-01-067-4548	Fuel Quantity Tank Unit	5L14-3-21-13		Honeywell	
970	JG298H1	6620-00-403-9209	Pressure Ratio Indicator		77-10-3	Honeywell	
971	JG298H2						
972	EA573A-1	6610-00-530-0961	Position Transmitter	5P5-2-10-3		Liquidometer	
973	EA773C-1A		Position Transmitter	5P5-2-10-4		Liquidometer	
974	EA573A-5		Position Transmitter			Liquidometer	
975	EA573A-6		Position Transmitter			Liquidometer	
976	EA573A-7		Position Transmitter			Liquidometer	
977	EA753A-6A		Position Transmitter			Liquidometer	
978	EA7573C-2A		Position Transmitter			Liquidometer	
979	Type TRU-80/A		Oil Pressure Transmitter	5P5-3-69-2			F105F,G; RB57F; T38A
980	EA173E1		Position Transmitter	5P5-2-3-3		Liquidometer	
981	EA173E2	6610-00-550-6913		5P5-2-3-4			
982	JG7020A2		Fuel or Oil Quantity Indicator	5L6-3-5-3		Honeywell	
983	JG7020A3		Fuel or Oil Quantity Indicator	5L6-3-5-4		Honeywell	
984	JG7020A10		Fuel or Oil Quantity Indicator			Honeywell	
985	JG7020A11		Fuel or Oil Quantity Indicator			Honeywell	
986	JG7020A12		Fuel or Oil Quantity Indicator			Honeywell	
987	JG7020A13		Fuel or Oil Quantity Indicator			Honeywell	
988	JG7020A18		Fuel or Oil Quantity Indicator			Honeywell	
989	JG7020A19		Fuel or Oil Quantity Indicator			Honeywell	
990	JG7020A20		Fuel or Oil Quantity Indicator			Honeywell	
991	JG7020A21		Fuel or Oil Quantity Indicator			Honeywell	
992	JG7020A22		Fuel or Oil Quantity Indicator			Honeywell	
993	JG7020A23		Fuel or Oil Quantity Indicator			Honeywell	
994	JG7020A24		Fuel or Oil Quantity Indicator			Honeywell	
995	JG7020A25		Fuel or Oil Quantity Indicator			Honeywell	
996	JG7020A26		Fuel or Oil Quantity Indicator			Honeywell	
997	JG7020A27		Fuel or Oil Quantity Indicator			Honeywell	
998	JG7020A28		Fuel or Oil Quantity Indicator			Honeywell	
999	JG7020A29		Fuel or Oil Quantity Indicator			Honeywell	
1000	JG7020A30		Fuel or Oil Quantity Indicator			Honeywell	
1001	JG7020A31		Fuel or Oil Quantity Indicator			Honeywell	
1002	JG7020A32		Fuel or Oil Quantity Indicator			Honeywell	
1003	JG7020A34		Fuel or Oil Quantity Indicator			Honeywell	
1004	JG7020A35		Fuel or Oil Quantity Indicator			Honeywell	
1005	JG7020A36		Fuel or Oil Quantity Indicator			Honeywell	
1006	JG7020A38		Fuel or Oil Quantity Indicator			Honeywell	
1007	JG7020A39	6680-00-600-1723	Fuel or Oil Quantity Indicator			Honeywell	
1008	JG7020A4		Fuel or Oil Quantity Indicator			Honeywell	
1009	JG7020A40	6680-00-663-4351	Fuel or Oil Quantity Indicator			Honeywell	
1010	JG7020A42	6680-00-663-4350	Fuel or Oil Quantity Indicator			Honeywell	
1011	JG7020A43		Fuel or Oil Quantity Indicator			Honeywell	
1012	JG7020A47		Fuel or Oil Quantity Indicator			Honeywell	
1013	JG7020A48		Fuel or Oil Quantity Indicator			Honeywell	
1014	JG7020A49	6680-00-663-5571	Fuel or Oil Quantity Indicator			Honeywell	
1015	JG7020A5		Fuel or Oil Quantity Indicator			Honeywell	
1016	JG7020A50		Fuel or Oil Quantity Indicator			Honeywell	
1017	JG7020A51		Fuel or Oil Quantity Indicator			Honeywell	
1018	JG7020A52		Fuel or Oil Quantity Indicator			Honeywell	
1019	JG7020A53		Fuel or Oil Quantity Indicator			Honeywell	
1020	JG7020A54		Fuel or Oil Quantity Indicator			Honeywell	
1021	JG7020A55		Fuel or Oil Quantity Indicator			Honeywell	
1022	JG7020A57		Fuel or Oil Quantity Indicator			Honeywell	
1023	JG7020A58		Fuel or Oil Quantity Indicator			Honeywell	
1024	JG7020A6		Fuel or Oil Quantity Indicator			Honeywell	
1025	JG7020A60		Fuel or Oil Quantity Indicator			Honeywell	
1026	JG7020A61		Fuel or Oil Quantity Indicator			Honeywell	
1027	JG7020A62		Fuel or Oil Quantity Indicator			Honeywell	
1028	JG7020A63		Fuel or Oil Quantity Indicator			Honeywell	
1029	JG7020A65		Fuel or Oil Quantity Indicator			Honeywell	
1030	JG7020A66		Fuel or Oil Quantity Indicator			Honeywell	
1031	JG7020A67		Fuel or Oil Quantity Indicator			Honeywell	
1032	JG7020A68	6680-00-675-9760	Fuel or Oil Quantity Indicator			Honeywell	
1033	JG7020A7		Fuel or Oil Quantity Indicator			Honeywell	
1034	JG7020A70		Fuel or Oil Quantity Indicator			Honeywell	
1035	JG7020A71		Fuel or Oil Quantity Indicator			Honeywell	
1036	JG7020A72	6680-00-526-6094	Fuel or Oil Quantity Indicator			Honeywell	
1037	JG7020A73		Fuel or Oil Quantity Indicator			Honeywell	
1038	JG7020A74		Fuel or Oil Quantity Indicator			Honeywell	
1039	JG7020A77		Fuel or Oil Quantity Indicator			Honeywell	
1040	JG7020C1		Fuel or Oil Quantity Indicator			Honeywell	
1041	JG7020C2		Fuel or Oil Quantity Indicator			Honeywell	
1042	JG7020C3		Fuel or Oil Quantity Indicator			Honeywell	
1043	JG7020C9	6680-00-663-4179	Fuel or Oil Quantity Indicator			Honeywell	
1044	JG7021A16	6680-00-527-7412	Fuel or Oil Quantity Indicator			Honeywell	
1045	JG7021A17	6680-00-527-7414	Fuel or Oil Quantity Indicator			Honeywell	
1046	JG7021A18	6680-00-527-7430	Fuel or Oil Quantity Indicator			Honeywell	
1047	JG7021A19		Fuel or Oil Quantity Indicator			Honeywell	
1048	JG7021A2		Fuel or Oil Quantity Indicator			Honeywell	
1049	JG7021A20		Fuel or Oil Quantity Indicator			Honeywell	
1050	JG7021A21		Fuel or Oil Quantity Indicator			Honeywell	
1051	JG7021A22		Fuel or Oil Quantity Indicator			Honeywell	
1052	JG7021A23		Fuel or Oil Quantity Indicator			Honeywell	
1053	JG7021A24		Fuel or Oil Quantity Indicator			Honeywell	
1054	JG7021A25		Fuel or Oil Quantity Indicator			Honeywell	
1055	JG7021A26		Fuel or Oil Quantity Indicator			Honeywell	
1056	JG7021A27		Fuel or Oil Quantity Indicator			Honeywell	
1057	JG7021A28		Fuel or Oil Quantity Indicator			Honeywell	
1058	JG7021A29		Fuel or Oil Quantity Indicator			Honeywell	
1059	JG7021A3		Fuel or Oil Quantity Indicator			Honeywell	
1060	JG7021A31		Fuel or Oil Quantity Indicator			Honeywell	
1061	JG7021A32		Fuel or Oil Quantity Indicator			Honeywell	

1062	JG7021A33		Fuel or Oil Quantity Indicator			Honeywell	
1063	JG7021A34		Fuel or Oil Quantity Indicator			Honeywell	
1064	JG7021A35		Fuel or Oil Quantity Indicator			Honeywell	
1065	JG7021A36		Fuel or Oil Quantity Indicator			Honeywell	
1066	JG7021A37		Fuel or Oil Quantity Indicator			Honeywell	
1067	JG7021A38		Fuel or Oil Quantity Indicator			Honeywell	
1068	JG7021A39		Fuel or Oil Quantity Indicator			Honeywell	
1069	JG7021A40	6680-00-663-4335	Fuel or Oil Quantity Indicator			Honeywell	
1070	JG7021A46		Fuel or Oil Quantity Indicator			Honeywell	
1071	JG7021A47		Fuel or Oil Quantity Indicator			Honeywell	
1072	JG7021A48		Fuel or Oil Quantity Indicator			Honeywell	
1073	JG7021A50		Fuel or Oil Quantity Indicator			Honeywell	
1074	JG7021A52		Fuel or Oil Quantity Indicator			Honeywell	
1075	JG7021A53		Fuel or Oil Quantity Indicator			Honeywell	
1076	JG7021A54		Fuel or Oil Quantity Indicator			Honeywell	
1077	JG7021A55		Fuel or Oil Quantity Indicator			Honeywell	
1078	JG7021A56		Fuel or Oil Quantity Indicator			Honeywell	
1079	JG7021A57		Fuel or Oil Quantity Indicator			Honeywell	
1080	JG7021A58		Fuel or Oil Quantity Indicator			Honeywell	
1081	JG7021A59		Fuel or Oil Quantity Indicator			Honeywell	
1082	JG7021A6		Fuel or Oil Quantity Indicator			Honeywell	
1083	JG7021A60		Fuel or Oil Quantity Indicator			Honeywell	
1084	JG7021A61		Fuel or Oil Quantity Indicator			Honeywell	
1085	JG7021A62		Fuel or Oil Quantity Indicator			Honeywell	
1086	JG7021A63		Fuel or Oil Quantity Indicator			Honeywell	
1087	JG7021A64		Fuel or Oil Quantity Indicator			Honeywell	
1088	JG7021A65		Fuel or Oil Quantity Indicator			Honeywell	
1089	JG7021A66		Fuel or Oil Quantity Indicator			Honeywell	
1090	JG7021A67		Fuel or Oil Quantity Indicator			Honeywell	
1091	JG7021A68		Fuel or Oil Quantity Indicator			Honeywell	
1092	JG7021A69		Fuel or Oil Quantity Indicator			Honeywell	
1093	JG7021A7		Fuel or Oil Quantity Indicator			Honeywell	
1094	JG7021A70		Fuel or Oil Quantity Indicator			Honeywell	
1095	JG7021A71		Fuel or Oil Quantity Indicator			Honeywell	
1096	JG7021A72		Fuel or Oil Quantity Indicator			Honeywell	
1097	JG7021A73		Fuel or Oil Quantity Indicator			Honeywell	
1098	JG7021A74		Fuel or Oil Quantity Indicator			Honeywell	
1099	JG7021A75		Fuel or Oil Quantity Indicator			Honeywell	
1100	JG7021A76		Fuel or Oil Quantity Indicator			Honeywell	
1101	JG7021A77		Fuel or Oil Quantity Indicator			Honeywell	
1102	JG7021A78		Fuel or Oil Quantity Indicator			Honeywell	
1103	JG7021A79		Fuel or Oil Quantity Indicator			Honeywell	
1104	JG7021A8		Fuel or Oil Quantity Indicator			Honeywell	
1105	JG7021A80		Fuel or Oil Quantity Indicator			Honeywell	
1106	JG7021A81		Fuel or Oil Quantity Indicator			Honeywell	
1107	JG7021A82		Fuel or Oil Quantity Indicator			Honeywell	
1108	JG7021A83		Fuel or Oil Quantity Indicator			Honeywell	
1109	JG7021A84		Fuel or Oil Quantity Indicator			Honeywell	
1110	JG7021A85		Fuel or Oil Quantity Indicator			Honeywell	
1111	JG7021A86		Fuel or Oil Quantity Indicator			Honeywell	
1112	JG7021A87		Fuel or Oil Quantity Indicator			Honeywell	
1113	JG7021A88		Fuel or Oil Quantity Indicator			Honeywell	
1114	JG7021A89		Fuel or Oil Quantity Indicator			Honeywell	
1115	JG7021A90		Fuel or Oil Quantity Indicator			Honeywell	
1116	JG7021A91		Fuel or Oil Quantity Indicator			Honeywell	
1117	JG7021A94		Fuel or Oil Quantity Indicator			Honeywell	
1118	JG7021A96		Fuel or Oil Quantity Indicator			Honeywell	
1119	JG7021C1		Fuel or Oil Quantity Indicator			Honeywell	
1120	JG7021C2		Fuel or Oil Quantity Indicator			Honeywell	
1121	JG7021C3	6680-00-530-3432	Fuel or Oil Quantity Indicator			Honeywell	
1122	SR-4A	6620-00-557-0350	Synchro Style Pressure Indicator	5P3-4-13-3		U.S. Gauge	
1123	SR-3A	6620-00-557-0362	Synchro Style Pressure Indicator	5P3-4-13-4		U.S. Gauge	C130B,E
1124	SR-3C	6620-00-060-0549	Synchro Style Pressure Indicator			U.S. Gauge	
1125	SR-4B	6620-00-557-0363	Synchro Style Pressure Indicator			U.S. Gauge	
1126	SR-5A		Synchro Style Pressure Indicator			U.S. Gauge	
1127	SR-5B	6830-01-283-5587	Synchro Style Pressure Indicator			U.S. Gauge	
1128	SR-7A	6685-00-557-0215	Synchro Style Pressure Indicator			U.S. Gauge	C130B
1129	SR-8B	6620-00-557-0816	Synchro Style Pressure Indicator			U.S. Gauge	
1130	SR-9A	6620-00-526-8272	Synchro Style Pressure Indicator			U.S. Gauge	B52D
1131	EA100AN17	6680-00-663-4243	Quantity Indicator	5L6-3-1-33		Liquidometer	
1132	EA100AN53	6680-00-515-4583	Quantity Indicator	5L6-3-1-34		Liquidometer	
1133	EA100AN70	6680-00-481-1039	Quantity Indicator			Liquidometer	
1134	EA100AN93	6680-00-663-4337	Quantity Indicator			Liquidometer	
1135	EA100ANH	6680-00-515-5911	Quantity Indicator			Liquidometer	
1136	EA100ANH126	6680-00-526-4446	Quantity Indicator			Liquidometer	
1137	EA100ANH133H		Quantity Indicator			Liquidometer	
1138	EA100ANH144	6680-00-580-9557	Quantity Indicator			Liquidometer	
1139	EA100ANH94	6680-00-244-9124	Quantity Indicator			Liquidometer	
1140	EA100ANH97	6680-00-663-8455	Quantity Indicator			Liquidometer	
1141	EA100ANH98	6680-00-515-5911	Quantity Indicator			Liquidometer	
1142	EA102AN116		Quantity Indicator			Liquidometer	
1143	EA102AN44	6680-00-663-5565	Quantity Indicator			Liquidometer	
1144	EA102AN65	6680-00-663-4184	Quantity Indicator			Liquidometer	
1145	EA124AN110	6680-00-481-1050	Quantity Indicator			Liquidometer	
1146	EA124AN115	6680-00-526-6102	Quantity Indicator			Liquidometer	
1147	EA148AN46	6680-00-663-4227	Quantity Indicator			Liquidometer	
1148	EA148AN47	6680-00-663-4228	Quantity Indicator			Liquidometer	
1149	EA148AN51	6680-00-663-5568	Quantity Indicator			Liquidometer	
1150	EA148AN71	6680-00-564-9229	Quantity Indicator			Liquidometer	
1151	EG116D1	6680-01-010-3155	Fuel Quantity Amplifier		95-4082A	Honeywell	
1152	2CM9AAA6	6680-00-815-1905	Tachometer Generator		77-10-01	Ametek	
1153	2CM9AAC6	6620-00-959-7632	Tachometer Generator		77-10-01	Ametek	
1154	2CM9AAH4	6680-00-445-1246	Tachometer Generator		77-10-01	Ametek	
1155	2CM9AAV6		Tachometer Generator		77-10-01	Ametek	
1156	2CM9AAZ6	6620-00-034-0505	Tachometer Generator		77-10-01	Ametek	
1157	2CM9ABE6	6680-01-122-6960	Tachometer Generator		77-10-01	Ametek	
1158	2CM9ABH7		Tachometer Generator		77-10-01	Ametek	
1159	2CM9ABK7	6680-01-358-9820	Tachometer Generator		77-10-01	Ametek	
1160	2CM9ABY7	6680-00-920-9213	Tachometer Generator		77-10-01	Ametek	
1161	2CM9ABZ7	6680-01-397-6175	Tachometer Generator		77-10-01	Ametek	
1162	2CM9ACE7	6680-00-406-4280	Tachometer Generator		77-10-01	Ametek	
1163	2CM9ACF8	6680-00-923-8466	Tachometer Generator		77-10-01	Ametek	
1164	2CM9ACH7		Tachometer Generator		77-10-01	Ametek	
1165	2CM9ADB9		Tachometer Generator		77-10-01	Ametek	
1166	2CM9ADE8	6680-00-008-4544	Tachometer Generator		77-10-01	Ametek	
1167	2CM9ADT6		Tachometer Generator		77-10-01	Ametek	
1168	8DJ81BLB4		Tachometer Indicator		77-10-16	Ametek	
1169	8DJ81BLB4U		Tachometer Indicator		77-10-16	Ametek	
1170	8DJ81BLC4		Tachometer Indicator		77-10-16	Ametek	
1171	8DJ81BLC4		Tachometer Indicator		77-10-16	Ametek	
1172	8DJ81LAA4	6620-00-085-2881	Tachometer Indicator		77-10-16	Ametek	
1173	8DJ81LAA4U		Tachometer Indicator		77-10-16	Ametek	
1174	8DJ81LCP4		Tachometer Indicator		77-10-16	Ametek	
1175	8DJ81LCP4U		Tachometer Indicator		77-10-16	Ametek	
1176	8DJ81LCR4		Tachometer Indicator		77-10-16	Ametek	
1177	8DJ81LCR4U		Tachometer Indicator		77-10-16	Ametek	
1178	8DJ81LCT4		Tachometer Indicator		77-10-16	Ametek	
1179	8DJ81LCT4U		Tachometer Indicator		77-10-16	Ametek	

1180	8DJ81LSC4		Tachometer Indicator		77-10-16	Ametek	
1181	8DJ81LSC4U		Tachometer Indicator		77-10-16	Ametek	
1182	8DJ81LVA4		Tachometer Indicator		77-10-16	Ametek	
1183	8DJ81LVA4U		Tachometer Indicator		77-10-16	Ametek	
1184	8DJ81LVB4	6620-01-105-3261	Tachometer Indicator		77-10-16	Ametek	
1185	8DJ81LVB4U		Tachometer Indicator		77-10-16	Ametek	
1186	8DJ81LVF4		Tachometer Indicator		77-10-16	Ametek	
1187	8DJ81LVF4U		Tachometer Indicator		77-10-16	Ametek	
1188	8DJ81LVG4		Tachometer Indicator		77-10-16	Ametek	
1189	8DJ81LVG4U		Tachometer Indicator		77-10-16	Ametek	
1190	8DJ81LVL4		Tachometer Indicator		77-10-16	Ametek	
1191	8DJ81LVL4U		Tachometer Indicator		77-10-16	Ametek	
1192	8DJ81LWA4	6620-00-684-1952	Tachometer Indicator		77-10-16	Ametek	
1193	8DJ81LWA4U		Tachometer Indicator		77-10-16	Ametek	
1194	8DJ81LWC4		Tachometer Indicator		77-10-16	Ametek	
1195	8DJ81LWC4U		Tachometer Indicator		77-10-16	Ametek	
1196	8DJ81LWR4		Tachometer Indicator		77-10-16	Ametek	
1197	8DJ81LWR4U		Tachometer Indicator		77-10-16	Ametek	
1198	8DJ81LWS4	6620-01-441-7896	Tachometer Indicator		77-10-16	Ametek	
1199	8DJ81LWS4U		Tachometer Indicator		77-10-16	Ametek	
1200	8DJ81LWT4		Tachometer Indicator		77-10-16	Ametek	
1201	8DJ81LWT4U		Tachometer Indicator		77-10-16	Ametek	
1202	8DJ81LWY4		Tachometer Indicator		77-10-16	Ametek	
1203	8DJ81LWY4U		Tachometer Indicator		77-10-16	Ametek	
1204	8DJ81LWZ4		Tachometer Indicator		77-10-16	Ametek	
1205	8DJ81LWZ4U		Tachometer Indicator		77-10-16	Ametek	
1206	8DJ81LXF4		Tachometer Indicator		77-10-16	Ametek	
1207	8DJ81LXF4U		Tachometer Indicator		77-10-16	Ametek	
1208	8DJ81LXG4		Tachometer Indicator		77-10-16	Ametek	
1209	8DJ81LXG4U		Tachometer Indicator		77-10-16	Ametek	
1210	8DJ81LXH4		Tachometer Indicator		77-10-16	Ametek	
1211	8DJ81LXH4U		Tachometer Indicator		77-10-16	Ametek	
1212	8DJ81LXK4		Tachometer Indicator		77-10-16	Ametek	
1213	8DJ81LXK4U		Tachometer Indicator		77-10-16	Ametek	
1214	8DJ81LXT4		Tachometer Indicator		77-10-16	Ametek	
1215	8DJ81LXT4U		Tachometer Indicator		77-10-16	Ametek	
1216	8DJ81LYP4		Tachometer Indicator		77-10-16	Ametek	
1217	8DJ81LYP4U		Tachometer Indicator		77-10-16	Ametek	
1218	8DJ81LYT4		Tachometer Indicator		77-10-16	Ametek	
1219	8DJ81LYT4U		Tachometer Indicator		77-10-16	Ametek	
1220	8DJ81LYV4		Tachometer Indicator		77-10-16	Ametek	
1221	8DJ81LYV4U		Tachometer Indicator		77-10-16	Ametek	
1222	8DJ81LYX4		Tachometer Indicator		77-10-16	Ametek	
1223	8DJ81LYX4U		Tachometer Indicator		77-10-16	Ametek	
1224	8DJ81LZC4		Tachometer Indicator		77-10-16	Ametek	
1225	8DJ81LZC4U		Tachometer Indicator		77-10-16	Ametek	
1226	8DJ81LZE4		Tachometer Indicator		77-10-16	Ametek	
1227	8DJ81LZE4U		Tachometer Indicator		77-10-16	Ametek	
1228	8DJ81LZF4		Tachometer Indicator		77-10-16	Ametek	
1229	8DJ81LZF4U		Tachometer Indicator		77-10-16	Ametek	
1230	8DJ81WAG4		Tachometer Indicator		77-10-16	Ametek	
1231	8DJ81WAG4U		Tachometer Indicator		77-10-16	Ametek	
1232	8DJ81WAL4		Tachometer Indicator		77-10-16	Ametek	
1233	8DJ81WAL4U		Tachometer Indicator		77-10-16	Ametek	
1234	8DJ81WAP4	6620-01-161-7610	Tachometer Indicator		77-10-16	Ametek	
1235	8DJ81WAP4	6620-01-161-7610	Tachometer Indicator		77-10-16	Ametek	
1236	8DJ81WAP4U		Tachometer Indicator		77-10-16	Ametek	
1237	8DJ81WAP4U		Tachometer Indicator		77-10-16	Ametek	
1238	8DJ81WAY4	6620-01-007-0103	Tachometer Indicator		77-10-16	Ametek	E3A
1239	8DJ81WAY4U		Tachometer Indicator		77-10-16	Ametek	
1240	8DJ81WBA4		Tachometer Indicator		77-10-16	Ametek	
1241	8DJ81WBA4U		Tachometer Indicator		77-10-16	Ametek	
1242	8DJ81WBB4		Tachometer Indicator		77-10-16	Ametek	
1243	8DJ81WBB4U		Tachometer Indicator		77-10-16	Ametek	
1244	8DJ81WBC4		Tachometer Indicator		77-10-16	Ametek	
1245	8DJ81WBC4U		Tachometer Indicator		77-10-16	Ametek	
1246	8DJ81WBD4		Tachometer Indicator		77-10-16	Ametek	
1247	8DJ81WBD4U		Tachometer Indicator		77-10-16	Ametek	
1248	8DJ81WBF4		Tachometer Indicator		77-10-16	Ametek	
1249	8DJ81WBF4U		Tachometer Indicator		77-10-16	Ametek	
1250	8DJ81WBG4		Tachometer Indicator		77-10-16	Ametek	
1251	8DJ81WBG4U		Tachometer Indicator		77-10-16	Ametek	
1252	8DJ81WBL4		Tachometer Indicator		77-10-16	Ametek	
1253	8DJ81WBL4U		Tachometer Indicator		77-10-16	Ametek	
1254	8DJ81WBM4		Tachometer Indicator		77-10-16	Ametek	
1255	8DJ81WBM4U		Tachometer Indicator		77-10-16	Ametek	
1256	8DJ81WBS4		Tachometer Indicator		77-10-16	Ametek	
1257	8DJ81WBS4U		Tachometer Indicator		77-10-16	Ametek	
1258	8DJ81WBT4		Tachometer Indicator		77-10-16	Ametek	
1259	8DJ81WBT4U		Tachometer Indicator		77-10-16	Ametek	
1260	8DJ81WCF4		Tachometer Indicator		77-10-16	Ametek	
1261	8DJ81WCF4U		Tachometer Indicator		77-10-16	Ametek	
1262	8DJ81WCG4		Tachometer Indicator		77-10-16	Ametek	
1263	8DJ81WCG4U		Tachometer Indicator		77-10-16	Ametek	
1264	8DJ81WCR4		Tachometer Indicator		77-10-16	Ametek	
1265	8DJ81WCR4U		Tachometer Indicator		77-10-16	Ametek	
1266	8DJ81WCS4		Tachometer Indicator		77-10-16	Ametek	
1267	8DJ81WCS4U		Tachometer Indicator		77-10-16	Ametek	
1268	8DJ81WCT4		Tachometer Indicator		77-10-16	Ametek	
1269	8DJ81WCT4U		Tachometer Indicator		77-10-16	Ametek	
1270	8DJ81WCW4		Tachometer Indicator		77-10-16	Ametek	
1271	8DJ81WCW4U		Tachometer Indicator		77-10-16	Ametek	
1272	8DJ81WCX4		Tachometer Indicator		77-10-16	Ametek	
1273	8DJ81WCX4U		Tachometer Indicator		77-10-16	Ametek	
1274	8DJ81WDK4		Tachometer Indicator		77-10-16	Ametek	
1275	8DJ81WDK4U		Tachometer Indicator		77-10-16	Ametek	
1276	8DJ81WDL4		Tachometer Indicator		77-10-16	Ametek	
1277	8DJ81WDL4U		Tachometer Indicator		77-10-16	Ametek	
1278	SLZ9065		Inertial-lead Vertical Speed Indicator		34-10-05	Teledyne Avionics	
1279	SLZ9066	6610-00-864-9759	Inertial-lead Vertical Speed Indicator		34-10-05	Teledyne Avionics	
1280	SLZ9067		Inertial-lead Vertical Speed Indicator		34-10-05	Teledyne Avionics	
1281	SLZ9068	6610-00-966-5740	Inertial-lead Vertical Speed Indicator		34-10-05	Teledyne Avionics	
1282	SLZ9155		Inertial-lead Vertical Speed Indicator		34-10-05	Teledyne Avionics	
1283	SLZ9211		Inertial-lead Vertical Speed Indicator		34-10-05	Teledyne Avionics	
1284	SLZ9239		Inertial-lead Vertical Speed Indicator		34-10-05	Teledyne Avionics	
1285	SLZ9270		Inertial-lead Vertical Speed Indicator		34-10-05	Teledyne Avionics	
1286	SLZ9415		Inertial-lead Vertical Speed Indicator		34-10-05	Teledyne Avionics	
1287	SLZ9416		Inertial-lead Vertical Speed Indicator		34-10-05	Teledyne Avionics	
1288	SLZ9603		Inertial-lead Vertical Speed Indicator		34-10-05	Teledyne Avionics	
1289	SLZ9620		Inertial-lead Vertical Speed Indicator		34-10-05	Teledyne Avionics	
1290	SLZ9635		Inertial-lead Vertical Speed Indicator		34-10-05	Teledyne Avionics	
1291	SLZ9638		Inertial-lead Vertical Speed Indicator		34-10-05	Teledyne Avionics	
1292	SLZ9669		Inertial-lead Vertical Speed Indicator		34-10-05	Teledyne Avionics	
1293	SLZ9669-2		Inertial-lead Vertical Speed Indicator		34-10-05	Teledyne Avionics	
1294	SLZ9706		Inertial-lead Vertical Speed Indicator		34-10-05	Teledyne Avionics	
1295	SLZ9851		Inertial-lead Vertical Speed Indicator		34-10-05	Teledyne Avionics	
1296	SLZ9851-1		Inertial-lead Vertical Speed Indicator		34-10-05	Teledyne Avionics	
1297	1214X-8-05	6610-00-388-0046	Sensitive Max. Airspeed Indicator	5F8-2-9-3		Kollsman	

1298	1214BX-8-05	6610-00-526-7947	Sensitive Max. Airspeed Indicator	5F8-2-9-4		Kollsman	
1299	1214CX-8-05	6610-00-663-8723	Sensitive Max. Airspeed Indicator			Kollsman	
1300	1214DX-8-05	6610-00-530-0026	Sensitive Max. Airspeed Indicator			Kollsman	
1301	22A524	6680-00-585-1503	Tachometer Generator	5E5-3-20-3		Globe Industries	
1302	45D16	5930-01-017-0747	Switch, Gage Pressure		21-30-05	Custom Control Sensors	
1303	1G309		Pressure Switch		80-10-01	Custom Control Sensors	
1304	1G386		Pressure Switch		29-15-01	Custom Control Sensors	
1305	32D37-1	5930-01-480-5596	Differential Pressure Switch		21-21-03	Custom Control Sensors	
1306	42D107A1	5930-00-156-8203	Differential Pressure Switch		79-30-2	Custom Control Sensors	
1307	45D32		Differential Pressure Switch		79-33-02	Custom Control Sensors	
1308	238D1024-509		Differential Pressure Switch		79-33-22	Rohr	
1309	45D34	5306-00-721-5796	Differential Pressure Switch		79-33-22	Custom Control Sensors	
1310	8D1274		Gage Pressure Switch		77-31-02	Custom Control Sensors	
1311	S332T004-2		Gage Pressure Switch		77-31-02	BCAC	
1312	290D8042-503		Overpressure Indicator		30-28-53	Rohr	
1313	8GR1519		Overpressure Indicator		30-28-53	Custom Control Sensors	
1314	10-60552-41		Gage Pressure Switch		32-42-01	Boeing	
1315	90G236		Gage Pressure Switch		32-42-01	Custom Control Sensors	
1316	8D1494		Gage Pressure Switch		79-33-20	Custom Control Sensors	
1317	S332T004-35		Gage Pressure Switch		79-33-20	BCAC	
1318	10-60552-42		Gage Pressure Switch		32-21-01	Boeing	
1319	94P32		Gage Pressure Switch		32-21-01	Custom Control Sensors	
1320	8TJ39AAA2	6610-00-817-8767	Position Transmitter	5P5-2-20-3		General Electric	T39A
1321	F71-1A	6610-00-526-8173	Indicator, Wing Flap Position	5P3-3-31-3		United Control Corp.	
1322	FG120G3		Tank Unit	NAV 05-65AA-504		Honeywell	
1323	FG120G4		Tank Unit	NAV 05-65AA-505		Honeywell	
1324	FG120G10		Tank Unit				
1325	FG120G11		Tank Unit				
1326	FG120G5		Tank Unit				
1327	FG120G8		Tank Unit				
1328	FG120H10		Tank Unit				
1329	FG120H11		Tank Unit				
1330	FG120H12		Tank Unit				
1331	FG120H14		Tank Unit				
1332	FG120H15		Tank Unit				
1333	FG120H16		Tank Unit				
1334	FG120H6		Tank Unit				
1335	FG120H7		Tank Unit				
1336	FG120H8		Tank Unit				
1337	FG120H9		Tank Unit				
1338	FG120K1		Tank Unit				
1339	FG120K2		Tank Unit				
1340	FG120K3		Tank Unit				
1341	FG120K4		Tank Unit				
1342	FG120K5		Tank Unit				
1343	FG120K6	6680-00-547-4036	Tank Unit				
1344	FG120K7	6680-00-547-4037	Tank Unit				
1345	FG120K8		Tank Unit				
1346	FG120L1	6680-00-526-8062	Tank Unit				
1347	FG120L10	6680-00-526-8061	Tank Unit				
1348	FG120L11	6680-00-526-8060	Tank Unit				
1349	FG120L12	6680-00-526-8065	Tank Unit				
1350	FG120L2	6680-00-526-7388	Tank Unit				
1351	FG120L3	6680-00-526-7373	Tank Unit				
1352	FG120L4	6680-00-526-7246	Tank Unit				
1353	FG120L5	6680-00-526-7250	Tank Unit				
1354	FG120L6	6680-00-526-7240	Tank Unit				
1355	FG120L7	6680-00-526-7173	Tank Unit				
1356	FG120L8	6680-00-526-7263	Tank Unit				
1357	FG120L9	6680-00-526-7175	Tank Unit				
1358	1510340	4920-00-971-0204	Universal Attitude Indicator Test Set	33D3-17-9-1		Sperry	
1359	8DJ81CAA4	6680-00-663-4207	Tachometer Indicator		77-10-19	General Electric	
1360	8DJ81CAN4	6620-00-148-8307	Tachometer Indicator		77-10-19	General Electric	
1361	8DJ81CBD4	6620-01-157-9266	Tachometer Indicator		77-10-19	General Electric	
1362	8DJ81CDR4		Tachometer Indicator		77-10-19	General Electric	
1363	8DJ81CDS4		Tachometer Indicator		77-10-19	General Electric	
1364	8DJ81CDW4		Tachometer Indicator		77-10-19	General Electric	
1365	8DJ81CDX4		Tachometer Indicator		77-10-19	General Electric	
1366	8DJ81CDZ4		Tachometer Indicator		77-10-19	General Electric	
1367	JH5500	6610-00-243-2096	Directional Gyro Indicator	AN 05-20HC-1		Jack and Heintz	
1368	8DJ89CAA1		Tachometer Indicator		77-89-1	General Electric	
1369	8DJ89CAA2		Tachometer Indicator		77-89-1	General Electric	
1370	8DJ89CAB1		Tachometer Indicator		77-89-1	General Electric	
1371	8DJ89CAB2		Tachometer Indicator		77-89-1	General Electric	
1372	8DJ89CAF1		Tachometer Indicator		77-89-1	General Electric	
1373	8DJ89CAF2		Tachometer Indicator		77-89-1	General Electric	
1374	8DJ89CAH1		Tachometer Indicator		77-89-1	General Electric	
1375	8DJ89CAH2		Tachometer Indicator		77-89-1	General Electric	
1376	8DJ89CAK1	6620-01-479-6935	Tachometer Indicator		77-89-1	General Electric	
1377	8DJ89CAK2	6620-01-479-7221	Tachometer Indicator		77-89-1	General Electric	
1378	8DJ89CAL1		Tachometer Indicator		77-89-1	General Electric	
1379	8DJ89CAL2	6620-01-479-7221	Tachometer Indicator		77-89-1	General Electric	
1380	8DJ89CAM1		Tachometer Indicator		77-89-1	General Electric	
1381	8DJ89CAM2		Tachometer Indicator		77-89-1	General Electric	
1382	8DJ89CAN1		Tachometer Indicator		77-89-1	General Electric	
1383	8DJ89CAN2		Tachometer Indicator		77-89-1	General Electric	
1384	8DJ89CAS1		Tachometer Indicator		77-89-1	General Electric	
1385	8DJ89CAS2		Tachometer Indicator		77-89-1	General Electric	
1386	8DJ89CAT1		Tachometer Indicator		77-89-1	General Electric	
1387	8DJ89CAT2		Tachometer Indicator		77-89-1	General Electric	
1388	8DJ89CAV1		Tachometer Indicator		77-89-1	General Electric	
1389	8DJ89CAW1		Tachometer Indicator		77-89-1	General Electric	
1390	8DJ89CAW2		Tachometer Indicator		77-89-1	General Electric	
1391	8DJ89CAX1		Tachometer Indicator		77-89-1	General Electric	
1392	8DJ89CAX2		Tachometer Indicator		77-89-1	General Electric	
1393	8DJ89CAY1		Tachometer Indicator		77-89-1	General Electric	
1394	8DJ89CAY2		Tachometer Indicator		77-89-1	General Electric	
1395	8DJ89CAZ1		Tachometer Indicator		77-89-1	General Electric	
1396	8DJ89CAZ2		Tachometer Indicator		77-89-1	General Electric	
1397	JG412A2	6680-00-585-5859	Fuel Quantity Indicator	5L6-3-31-173		Honeywell	
1398	393007-07869	6680-00-815-7282	Fuel Quantity Indicator	NAVAIR 05-65AB-69		Simmonds	
1399	393007-07870	6680-00-815-7285					
1400	8DW53ACC227		Ammeter		31-53-1	General Electric	
1401	8DJ131LAB-1	6680-00-724-7616	Triple Tach Indicator	5E6-2-41-3		General Electric	
1402	FG250A6	6680-00-585-0827	Fuel Quantity Tank Unit	5L14-3-21-43		Honeywell	
1403	B118-58		Fuel Quantity Indicator		28-40-007	Simmonds	
1404	ST-104A	6620-00-526-7917	Oil Pressure Transmitter	05-55G-50 (nav)		U.S. Gauge	
1405	8AW61V1AA1		Ammeter and Voltmeter		31-61-1	General Electric	
1406	8AW60F1AA1		Frequency Meter		24-20-1	General Electric	
1407	42D49C	5930-00-840-0253	Pressure Switch		79-30-11	Custom Component	
1408	8DJ12GAV50		Position Indicator	5P3-3-22-3		General Electric	
1409	139602-01-01	6610-00-068-3464	Attitude Director Indicator	5F8-3-24-3		Lear Siegler (LSI)	
1410	102379	6610-00-939-5237	Remote Attitude Indicator	5F8-10-7-3		Astronautics	
1411	EA148ANH-70	6680-00-526-4435	Indicator, Hydraulic oil Quantity	5L6-3-19-3		Liquidometer	
1412	RG10310	5841-00-794-6401	Radar Pressurizing Control	Test Procedure		Strube, Inc.	
1413	77-149-1	6680-01-358-7721	Oil Quantity Transmitter	Test Procedure (ATP)		Meggitt Electronics	
1414	AW-2-17-A	6685-00-684-1667	Hydraulic Pressure Gage	5P2-2-32-3		U.S. Gauge	
1415	SRDS-15C	6620-00-474-6952	Thrust, Pressure Ratio Indicator	5P3-4-40-43		U.S. Gauge	

1416	34300-C1A-1-A1	6620-00-840-6182	Pressure Ratio Indicator	5P3-4-66-3		Bendix
1417	SRDS-15A	6620-00-801-8885	Thrust, Pressure Ratio Indicator	5P3-4-40-23		U.S. Gauge
1418	JG42B1	6620-00-342-9835	Pressure Ratio Indicator	5P3-4-22-3		Honeywell
1419	45716	6620-00-328-8690	Engine Pressure Ratio Indicator	5P3-4-32-3		Airesearch
1420	2CM9AAH4	6680-00-445-1246	Tachometer Generator	5E5-3-15-3		General Electric
1421	2CM11BAA4		Tachometer Generator	5E5-3-34-3		General Electric
1422	FG200A13	6680-00-783-1630	Fuel Quantity Tank Unit	5L14-3-21-82		Honeywell
1423	JG412A1	6680-00-580-1249	Fuel Quantity Indicator	5L6-3-31-43		Honeywell
1424	ST-4B	6620-00-526-7888	Pressure Transmitter, Synchro Style	5P5-3-1-73		US Gauge
1425	42D223		Differential Pressure switch		73-30-05	Custom Component
1426	415540	6620-00-515-4541	Tachometer Indicator	5E6-2-23-13		Norden-Ketay
1427	393003-013	6680-00-496-0568	Fuel Quantity Indicator	5L6-3-60-3		Simmonds
1428	ST-63A	6685-00-674-8409	Pressure Transmitter	navweps 05-55G-36		US Gauge
1429	ST-104A	6620-00-526-7917	Oil Pressure Transmitter	Navweps 05-55G-50		US Gauge
1430	ST-6B	6620-00-553-8988	Multipurpose Pressure Transmitter	AN 05-55G-9		US Gauge
1431	122141-001		Hermetically Sealed Switches		www.ledex.com	SAIA-Burgess
1432	ST-6AD	6685-00-756-5671	Synchro Pressure Transmitter	Navweps 05-55G-65		Ametek, Inc.
1433	ST-5E	6620-00-515-4713	Fuel Pressure Transmitter	Navaer 05-55G-524		US Gauge
1434	SR-4A	6620-00-557-0350	Synchro Pressure Indicator	5P3-4-13-3		US Gauge
1435	CDIA		Aircraft Clocks	AN 05-35A-3		Waltham
1436	EA307AN-1		Position Indicators	5P3-3-6-13		Liquidometer
1437	218-100		Oil Pressure Transmitter	5P5-3-22-3		Edison
1438	152B2	6685-00-557-5910	Indicators, Temperature	5E6-3-25-3		Lewis Engineering
1439	8TJ39AAB2	6610-00-684-1341	Position Transmitter	5P5-2-17-2		General Electric
1440	157800	6685-00-557-5910	Temperature Indicator, Thermocoup	5E6-3-27-3		Weston
1441	7612-17-B5-1	6620-01-029-5135	Pressure Transmitter Gage		MDSP64-2-24	Bendix Corporation
1442	200-002-001		Fuel Quantity Master Indicator		28-40-14	Gull Airborne
1443	SRL-92G	6685-01-094-0966	Position Indicator		29-30-08	Ametek
1444	393004-34750	6680-00-809-4354	Fuel Quantity Indicator	Navweps 05-65AB-63		Simmonds
1445	393008-035	6680-00-496-0574	Fuel Quantity Indicator	NAVAIR 05-65AB-90		Simmonds
1446				5E6-2-23-14		
1447				5F8-10-7-4		
1448				5F8-3-24-4		
1449	FG200A57	6680-00-783-1633		5L14-3-21-84		
1450	JG412A3	6680-00-585-5444		5L6-3-31-174		
1451	JG412A11	6680-00-865-7930		5L6-3-31-44		
1452				5L6-3-60-4		
1453	AS5945-2	5996-00-717-8111		5N2-2-6-4		
1454	ST-4C	6620-00-553-8986		5P5-3-1-74		
1455	H37500	6645-00-663-4083		AN 05-35A-11		Hamilton
1456				Navaer 05-55G-525		
1457				Navweps 05-65AB-64		
1458	5100					
1459	157801	6685-00-530-6314				
1460	176391	6685-00-557-7006				
1461	10-3269-10	5930-00-840-0253				Switches
1462	10-60927-3	5930-01-375-6570	Pressure Switch		29-15-01	Boeing
1463	128941-001	5930-01-145-7386	(Ledex)			(Ledex)
1464	145201-454					
1465	152B3					
1466	152B4	6685-00-530-3614				
1467	152B5	6625-00-578-5584				
1468	172934-001	5945-00-884-3407				
1469	172935-001	5930-01-082-5525				
1470	172936-001	5826-01-014-3389				
1471	172937-001	5930-01-113-3970				
1472	172938-001					
1473	172962-001	5945-01-479-9873				
1474	175095-001	5826-01-014-0878				
1475	175096-001	5945-01-062-0206				
1476	187408-001					
1477	200-002-002					
1478	218-100A	6620-00-556-8341				
1479	218-50A	6620-00-553-8854				
1480	2CM11BAA5	6620-00-785-2251				
1481	318-100	6620-00-690-8653				
1482	318-60	6620-00-723-2075				
1483	45716-1	6620-00-578-5563				
1484	45D16-1					
1485	53D13247	5841-00-794-6401				
1486	8AW60F2AA1	6625-00-034-0519				
1487	8AW60LFA1					
1488	8AW61A1AA1					
1489	8AW61A2AA1					
1490	8AW61LAA1	6625-00-006-7394				
1491	8AW61LAB1					
1492	8AW61LAC2					
1493	8AW61LAD2					
1494	8AW61LAH1					
1495	8AW61LVA1	6625-00-526-0756				
1496	8DW53AAC231		Ammeter		31-53-1	General Electric
1497	8DW53ACB230		Ammeter		31-53-1	General Electric
1498	8DW53VBA207	6625-01-479-8812	Voltmeter		31-53-1	General Electric
1499	8DW53VBA211	6625-00-562-0848	Voltmeter		31-53-1	General Electric
1500	AW2017AD01	6685-00-684-1667				Ametek
1501	B118-124					
1502	B118-126					
1503	B118-143					
1504	B118-143W					
1505	B118-143XW					
1506	B118-144					
1507	B118-312					
1508	B118-312W					
1509	B118-312XW					
1510	B118-313					
1511	B118-313W					
1512	B118-313XW					
1513	B118-314					
1514	B118-314W					
1515	B118-314XW					
1516	B118-315					
1517	B118-315W					
1518	B118-315XW					
1519	B118-316					
1520	B118-316W					
1521	B118-316XW					
1522	B118-317					
1523	B118-324					
1524	B118-324W					
1525	B118-324XW					
1526	B118-336					
1527	B118-337					
1528	B118-338					
1529	B118-339					
1530	B118-340					
1531	B118-341					
1532	B118-342					
1533	B118-356					

1534	B118-357					
1535	B118-59					
1536	B118-59W					
1537	B118-59XW					
1538	B118-60					
1539	B118-60W					
1540	B118-60XW					
1541	B118-61					
1542	B118-61W					
1543	B118-61XW					
1544	B118-62					
1545	B118-62W					
1546	B118-62XW					
1547	B118-63					
1548	B118-64					
1549	B118-65					
1550	B118-66					
1551	B118-67					
1552	B118-95					
1553	B118-95W					
1554	B118-95XW					
1555	B118-97					
1556	E37500	6645-00-487-4664			Elgin	
1557	EA308-1	6610-00-242-0609				
1558	EA308-10	6610-00-531-2759				
1559	EA308-11	6610-00-530-3065				
1560	EA308-2					
1561	EA308-3					
1562	FG200A65	6680-00-783-3685				
1563	FG200A68	6680-00-870-2626				
1564	FG200A72					
1565	FG200A73	6680-00-911-4295				
1566	FG200A75	6680-00-911-4298				
1567	FG200A76	6680-00-919-2702				
1568	FG200A77	6680-00-907-5703				
1569	FG200A78	6680-00-911-4297				
1570	FG200A82	6680-00-928-7007				
1571	FG201A20					
1572	FG201A25					
1573	FG210A13	6680-00-045-8732				
1574	FG225A1					
1575	FG225A10	6680-00-946-9998				
1576	FG225A3	6680-00-783-8730				
1577	FG225A7	6680-00-894-5069				
1578	FG225A8	6680-00-911-4290				
1579	FG225A9	6680-00-911-4291				
1580	FG226A1	6680-00-740-1568				
1581	FG226A3	6680-00-945-1205				
1582	FG226A5	6680-00-927-6314				
1583	FG240A1	6680-00-783-3687				
1584	FG240A5	6680-00-953-1815				
1585	FG250A42	6680-00-089-5300				
1586	FG250A43	6680-00-089-5299				
1587	FG250A44	6680-00-089-5298				
1588	FG250A53	6680-00-968-3281				
1589	FG250A7	6680-00-585-0828				
1590	FG250A8	6680-00-585-0810				
1591	FG450A51	6680-00-968-3277				
1592	FG450A53	6680-00-968-3281				
1593	JG412A10	6680-00-849-7809				
1594	JG412A4	6680-00-585-8600				
1595	JG412A52	6680-01-063-0597				
1596	JG412A53	6680-01-058-5861				
1597	JG412A54	6680-01-058-5862				
1598	JG412A55	6680-01-058-5863				
1599	JG412A56	6680-01-058-5864				
1600	JG42B4					
1601	MS28005-1	6620-00-553-8988				
1602	MS28130-4	6685-00-851-1824			(US Gauge Division)	
1603	RG50V4	6680-00-786-7018				
1604	RG50Z2					
1605	SR-3A	6620-00-557-0362				
1606	SR-3C	6620-00-060-0549				
1607	SR-4B	6620-00-557-0363				
1608	SR-5A					
1609	SR-5B	6830-01-283-5587				
1610	SR-7A	6685-00-557-0215				
1611	SR-8B	6620-00-557-0816				
1612	SR-9A	6200-00-526-8272				
1613	SRL-92H		Pneumatic Pressure Indicator			
1614	SRL-92P		Pneumatic Pressure Indicator			
1615	ST-104A	6620-00-526-7917				
1616	ST-104A1	6685-00-851-7351				
1617	ST-104A1	6685-00-821-7351				
1618	ST-104D	6620-00-561-9308				
1619	ST-104D	6620-00-561-9308				
1620	ST-3A	6620-00-526-7890				
1621	ST-3E					
1622	ST-4D	6620-00-553-8986				
1623	ST-4E					
1624	ST-4H	6620-00-553-8986				
1625	ST-4J	6620-00-526-7885				
1626	ST-62A	6685-00-663-5727				
1627	ST-6C	6620-00-553-8988				
1628	ST-9A	6620-00-509-7935				
1630	TF20-1		Liquid Qty Xmitter,Capacitance	33D2-6-182-11		Consolidated
1631	TF20-3		Liquid Qty Xmitter,Capacitance	33D2-6-182-11		Consolidated
1632	16000		Amplifier	5N2-2-4-2		Kearfott
1633	T-38A	(> T.O. REV OBSOLETE >)	Fuel Systems, T-38A Aircraft	1T-38A-2-5		
1634						
1635	YT-38	(UNABLE TO VERIFY REV)	Flightline Maintenance	T38-2		Northrop
1636	7609-37-B5-2		Autosyn Gage Pressure Xmitter	5P5-3-24-3		1-Paper, 1-CD-ROM
1637	7609-37-D5-2		Autosyn Gage Pressure Xmitter	5P5-3-24-3		
1638	7609-37-M5-2		Autosyn Gage Pressure Xmitter	5P5-3-24-3		
1639						
1640						
1641						
1642						
1643						